



# Weld 3-I-B 30 in.; Circ Loc. = 207 mm

1

## Zonal PA Techniques

US

DS

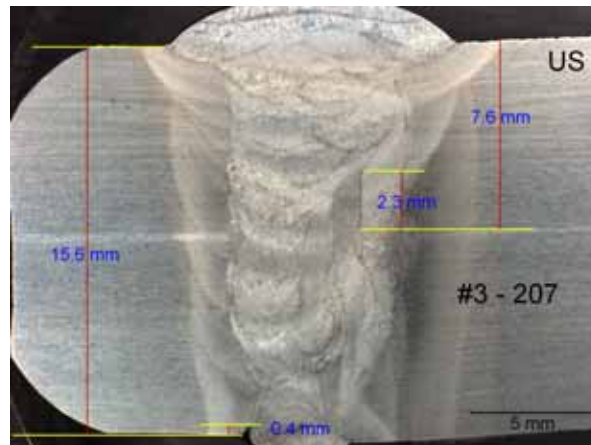
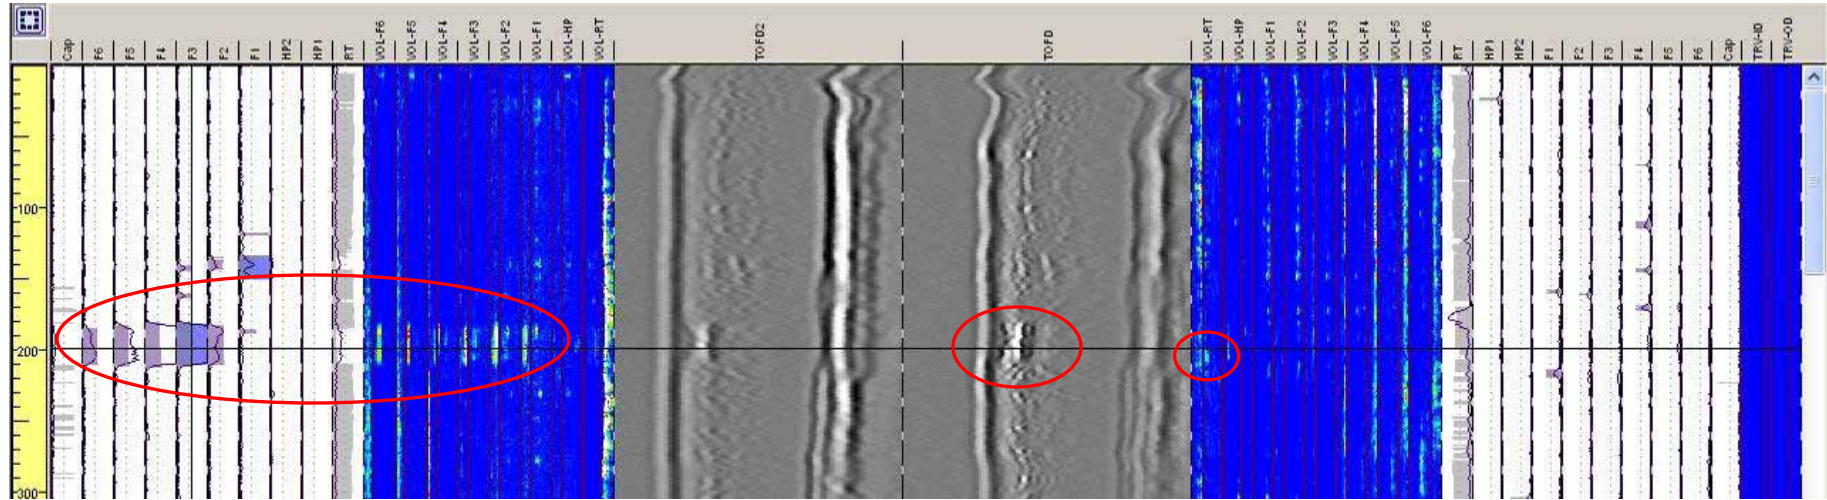


# Weld 3-I-B 30 in.; Circ Loc. = 354 mm

## Zonal PA Techniques

US

DS

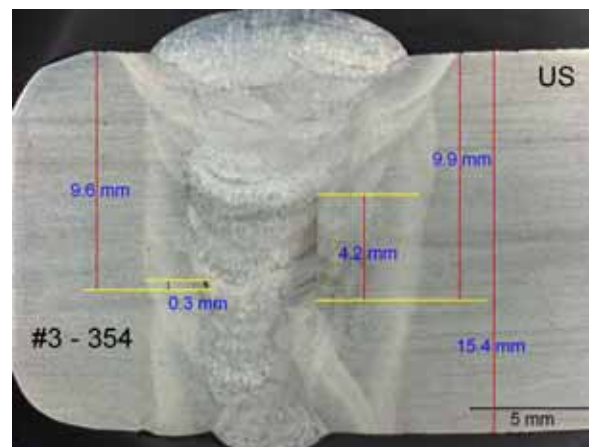
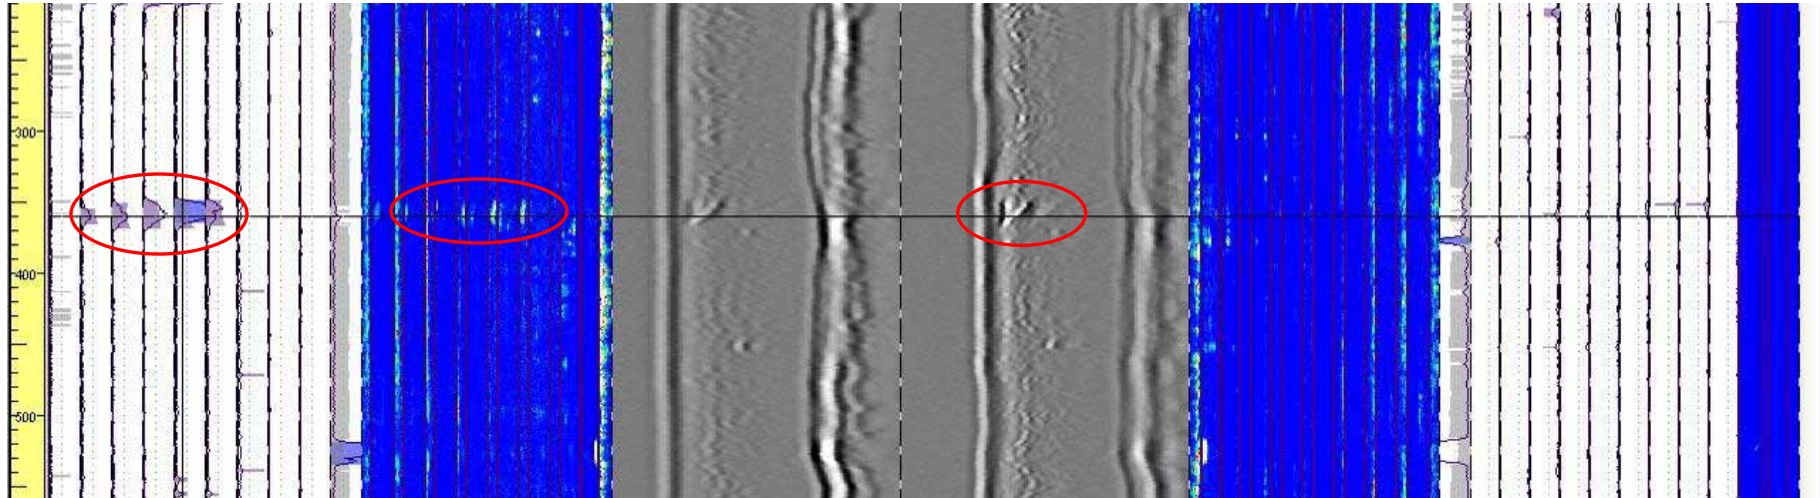


# Weld 3-I-B 30 in.; Circ Loc. = 449 mm

## Zonal PA Techniques

US

DS

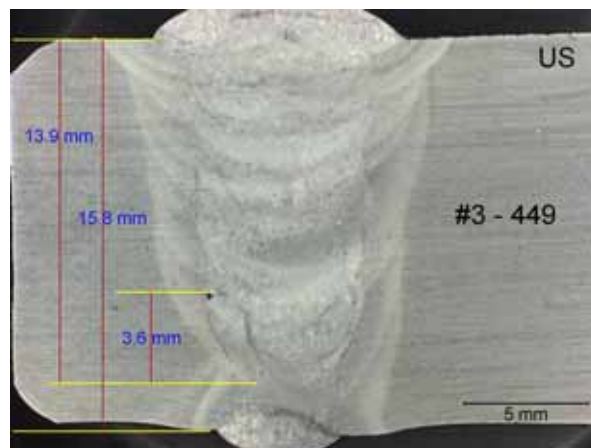
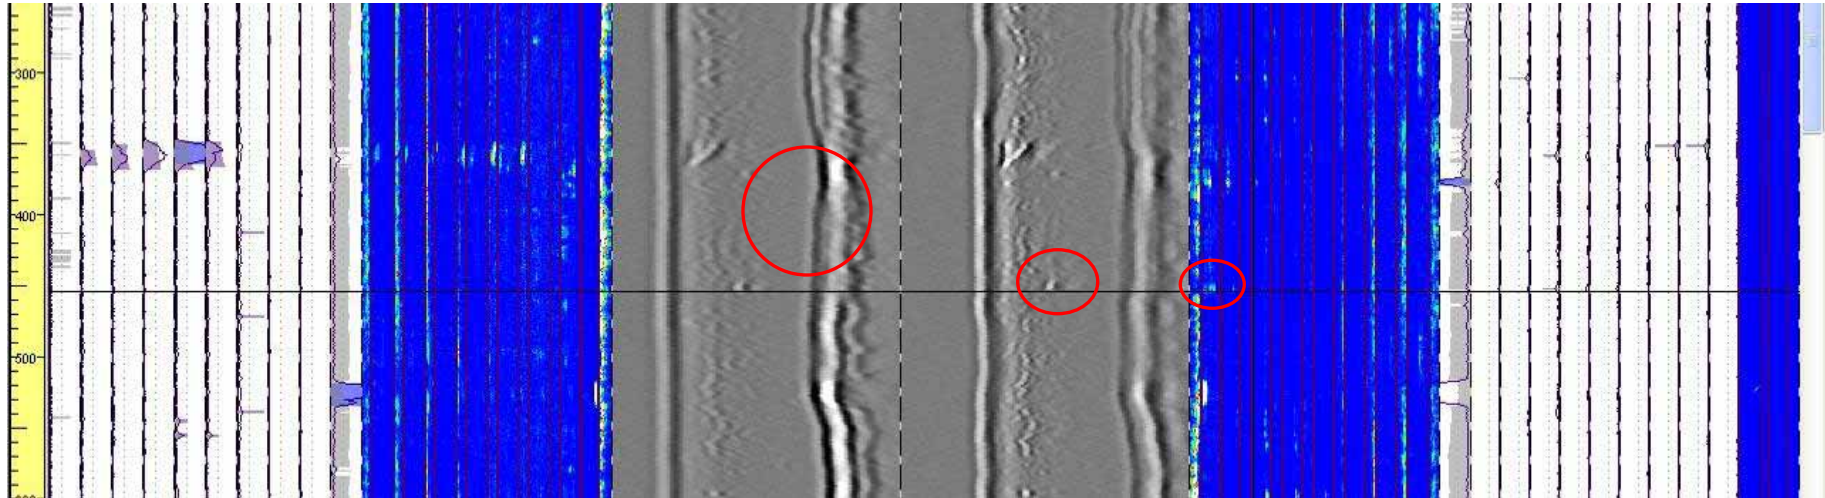


# Weld 3-I-B 30 in.; Circ Loc. = 529 mm

## Zonal PA Techniques

US

DS

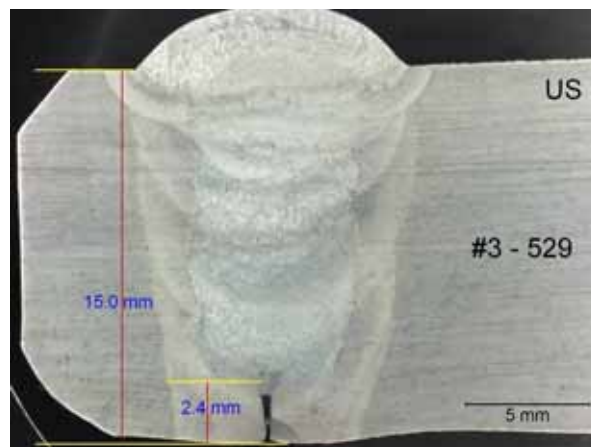
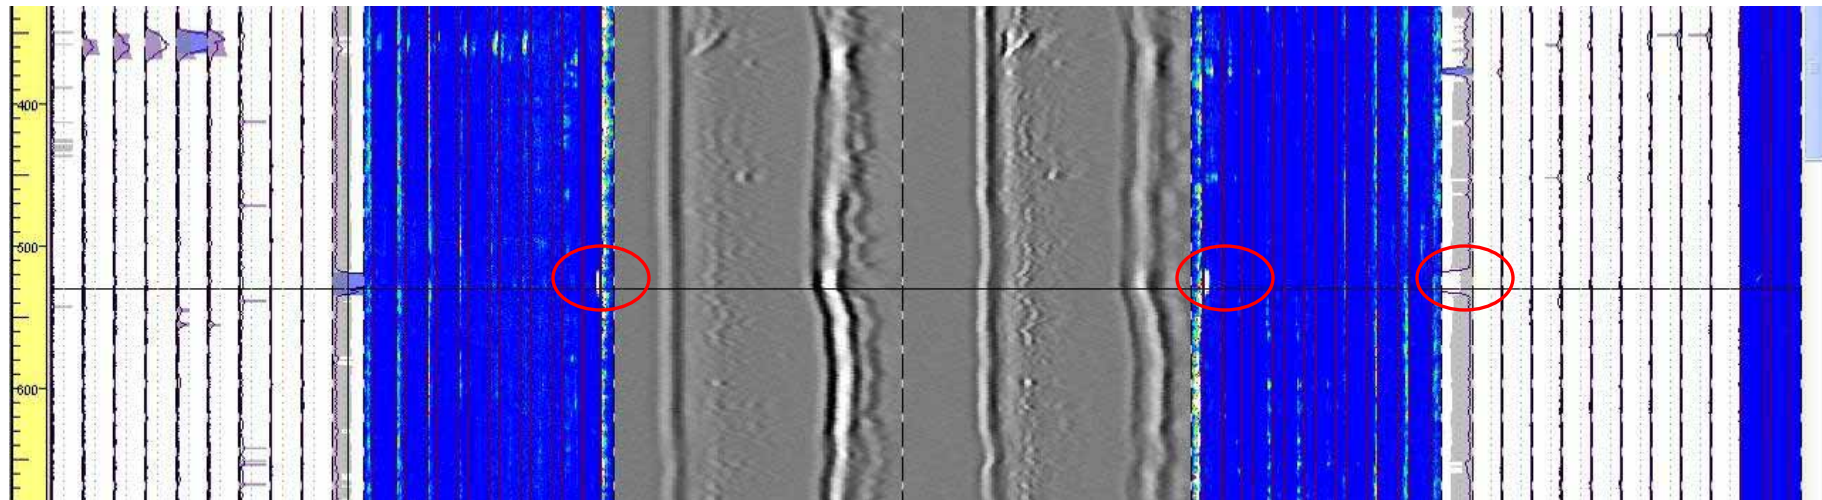


# Weld 3-I-B 30 in.; Circ Loc. = 766 mm

## Zonal PA Techniques

US

DS

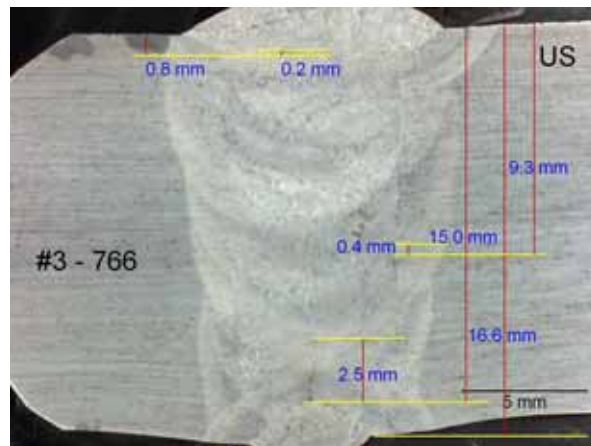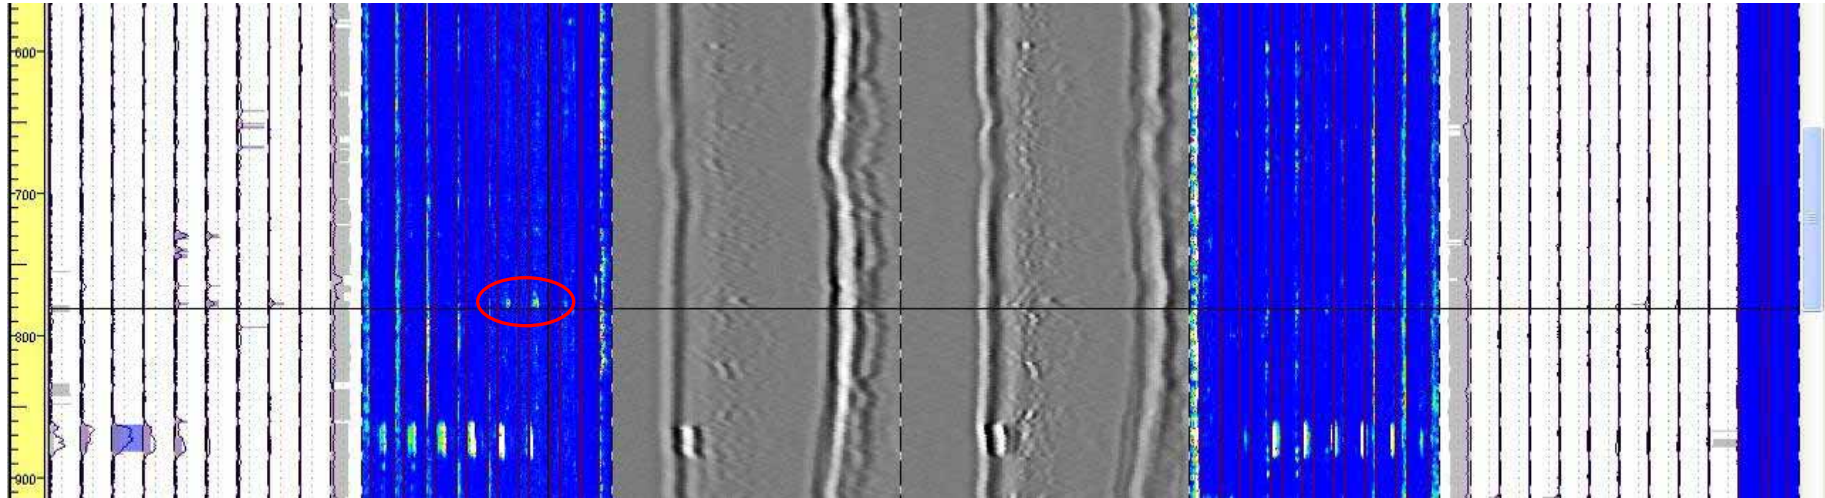


# Weld 3-I-B 30 in.; Circ Loc. = 932 mm

## Zonal PA Techniques

US

DS

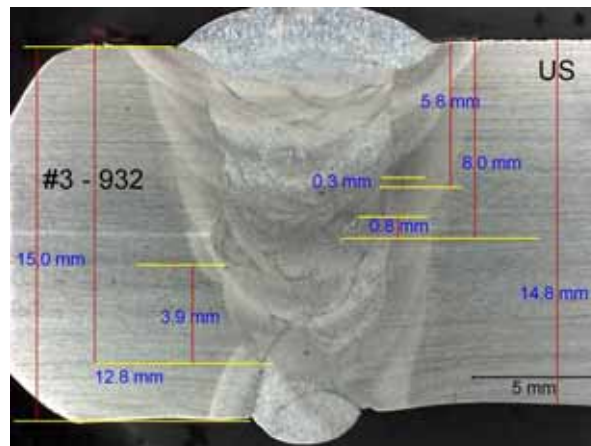



# Weld 3-I-B 30 in.; Circ Loc. = 1575 mm

7

## Zonal PA Techniques

US

DS

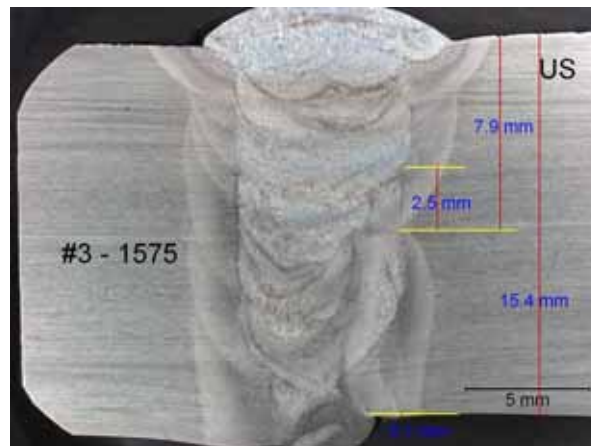
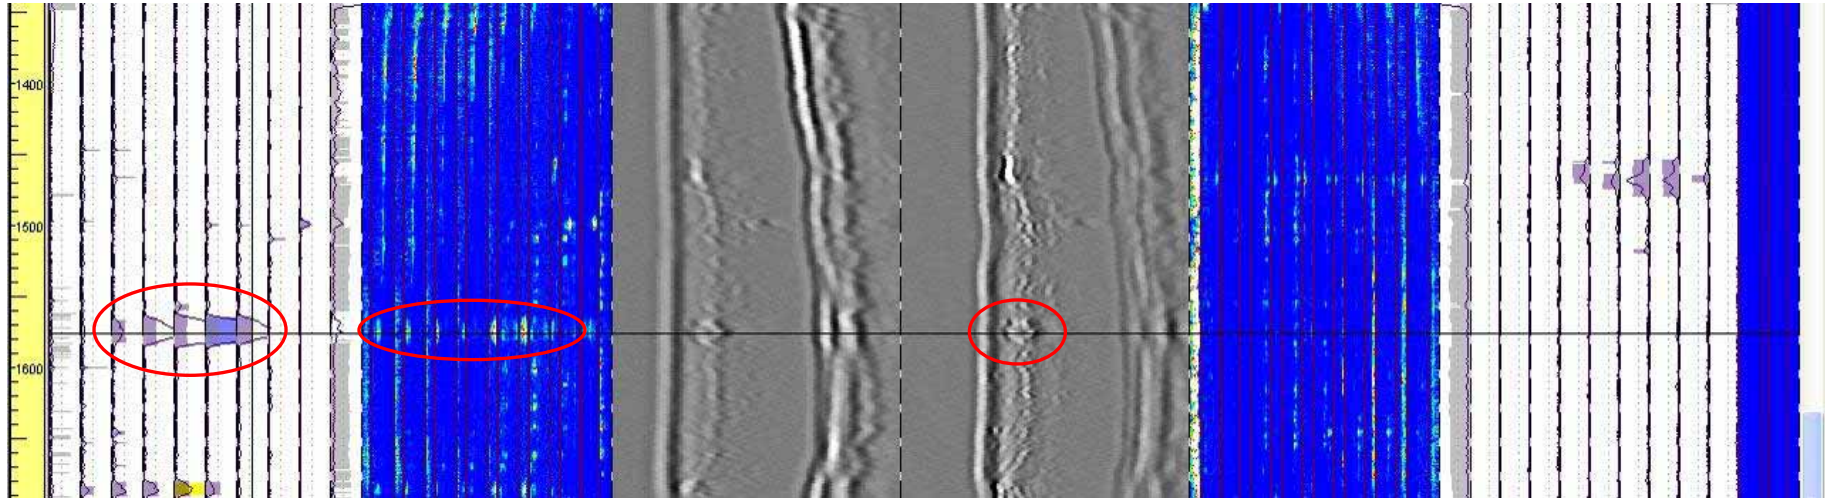


# Weld 3-I-B 30 in.; Circ Loc. = 1693 mm

## Zonal PA Techniques

US

DS

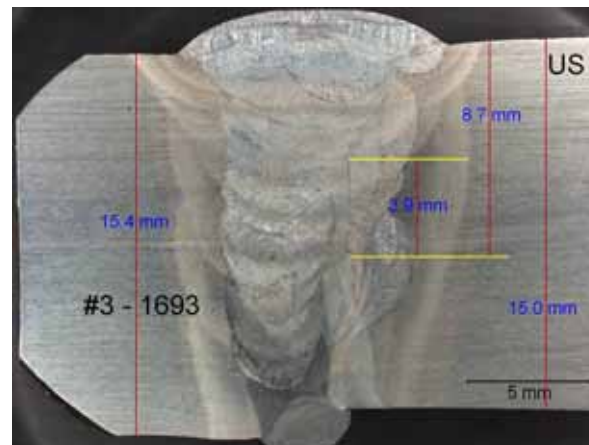
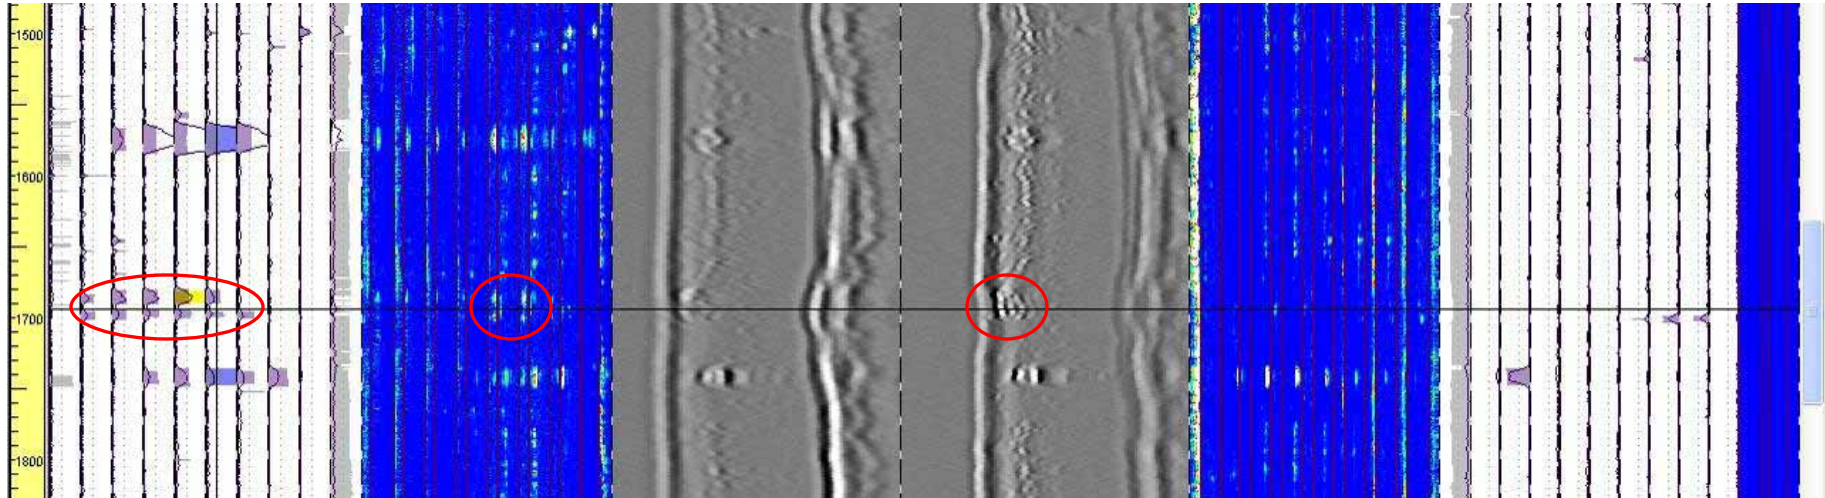


# Weld 3-I-B 30 in.; Circ Loc. = 1973 mm

## Zonal PA Techniques

US

DS

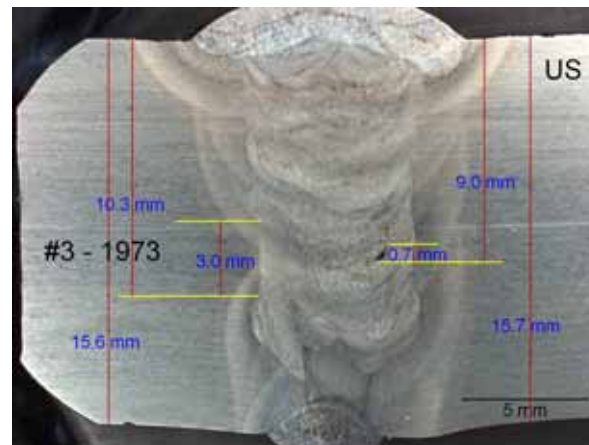
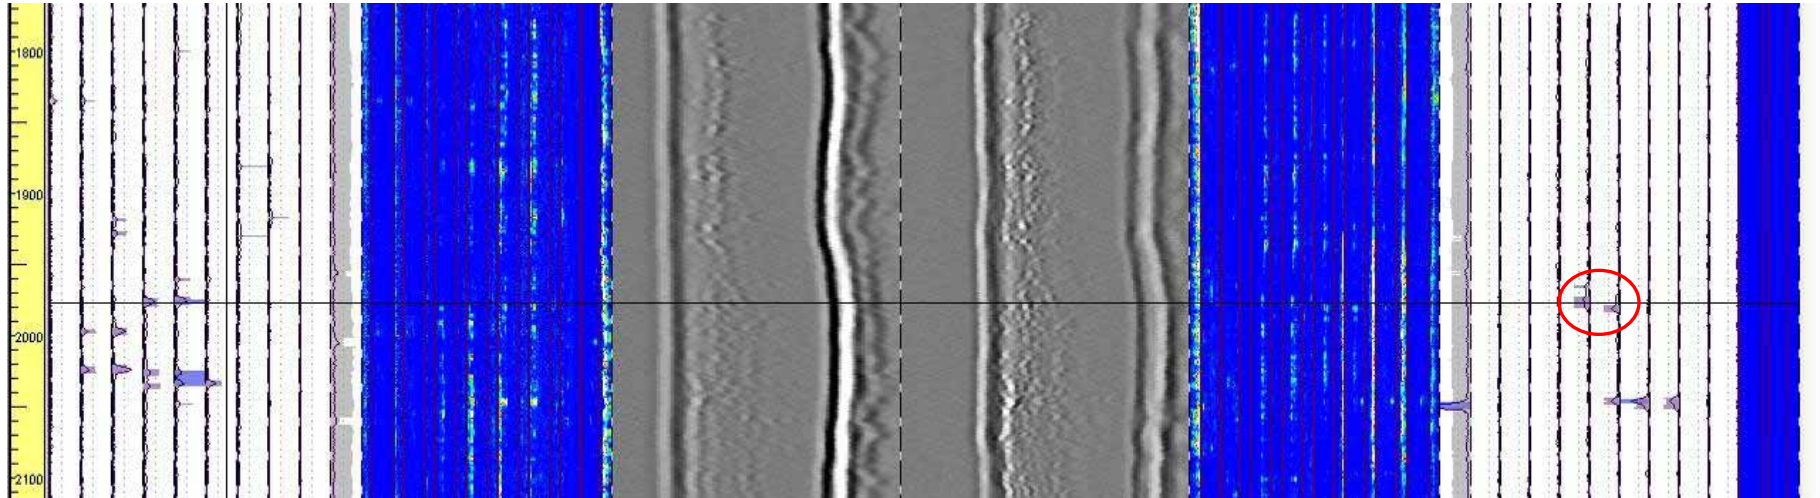


# Weld 3-I-B 30 in.; Circ Loc. = 2135 mm

## Zonal PA Techniques

US

DS

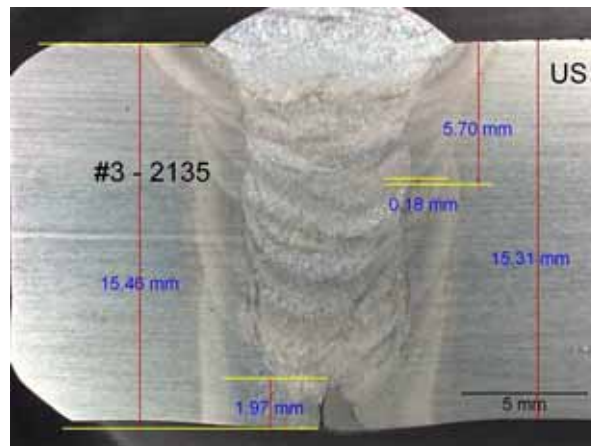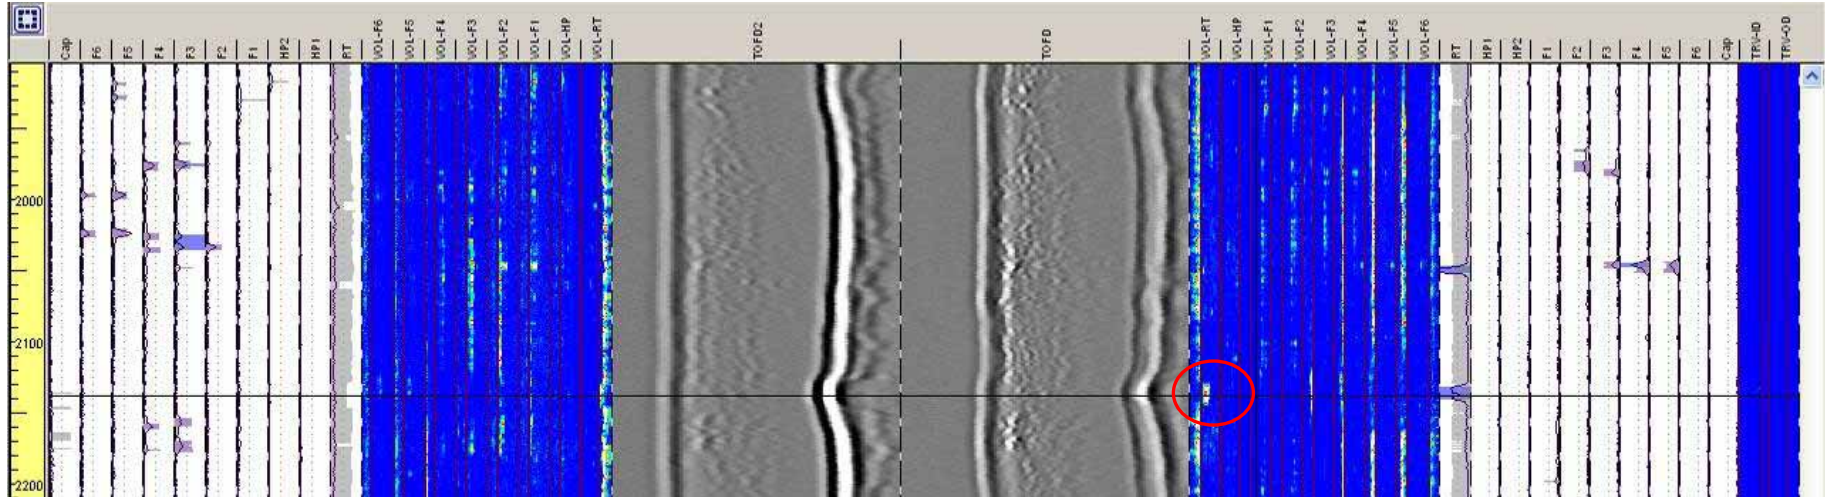

# Weld 3-I-B 30 in.; Circ Loc. = 2258 mm

## Zonal PA Techniques

US

DS

