
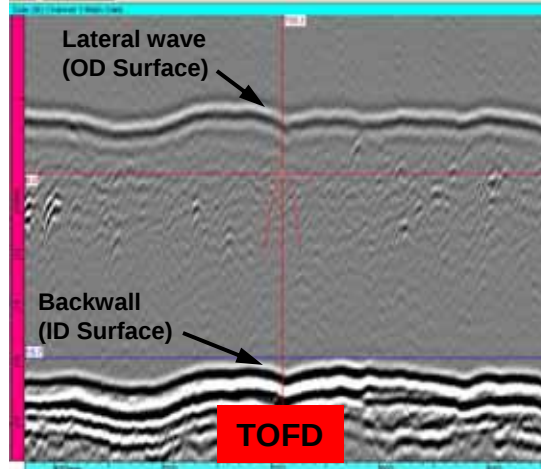




Example

Non-zonal PA Techniques


Upstream

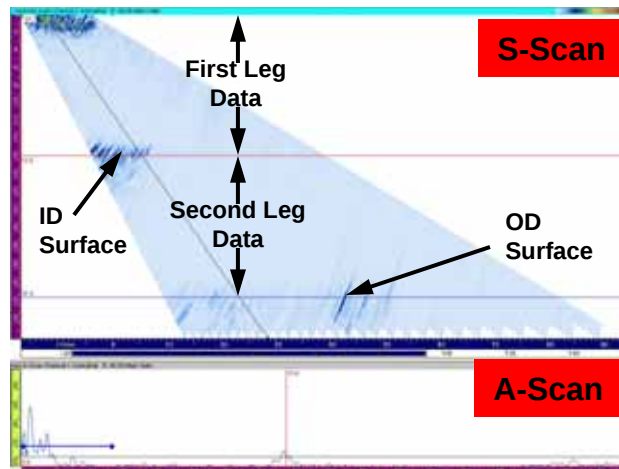

Downstream

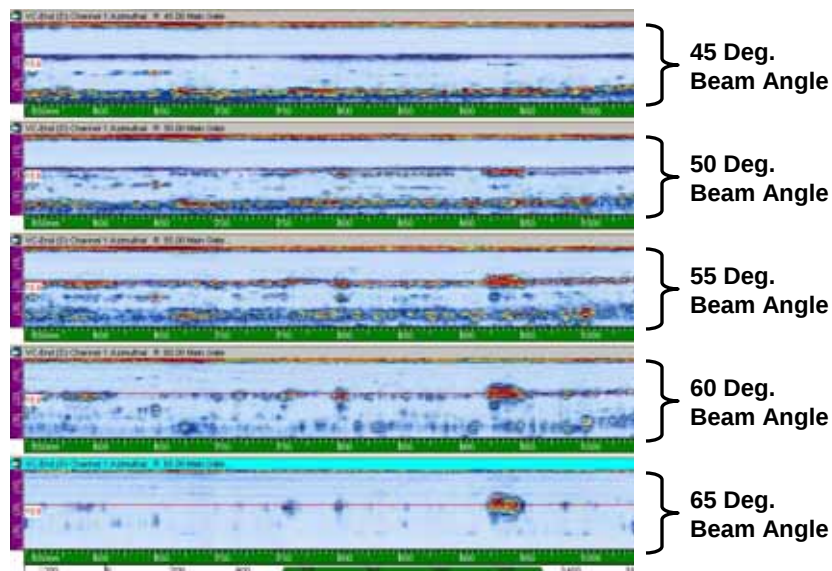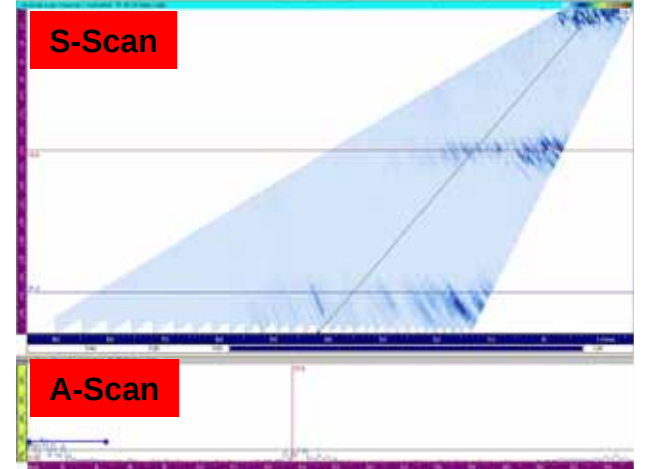

Merged
D-Scans





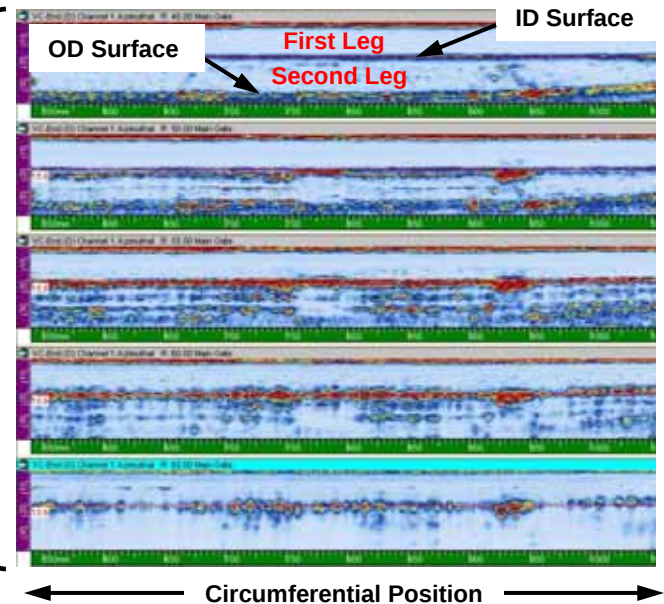


Weld 5; Circ Loc. = 140 mm

Non-zonal PA Techniques

US

DS

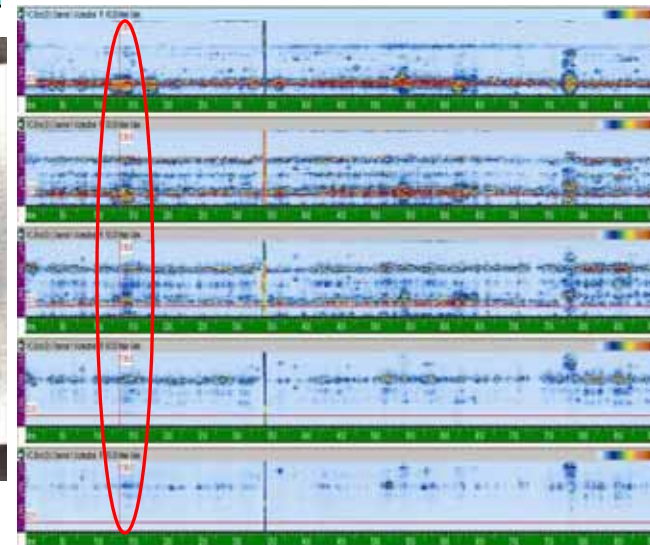
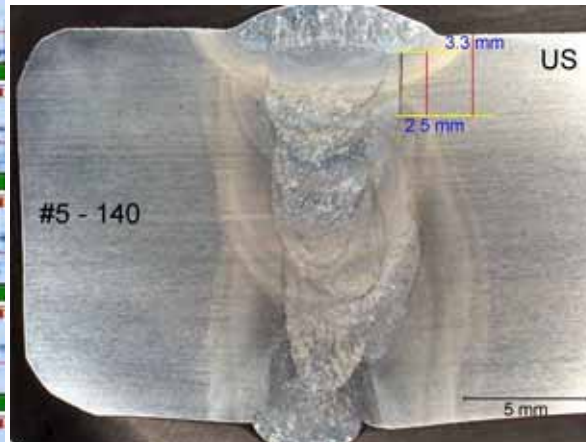
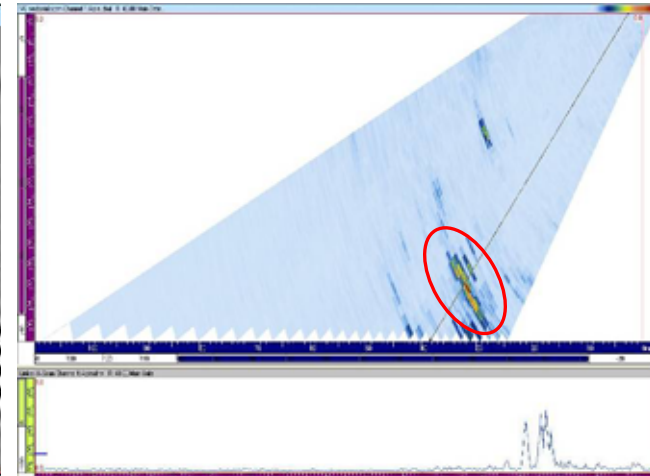
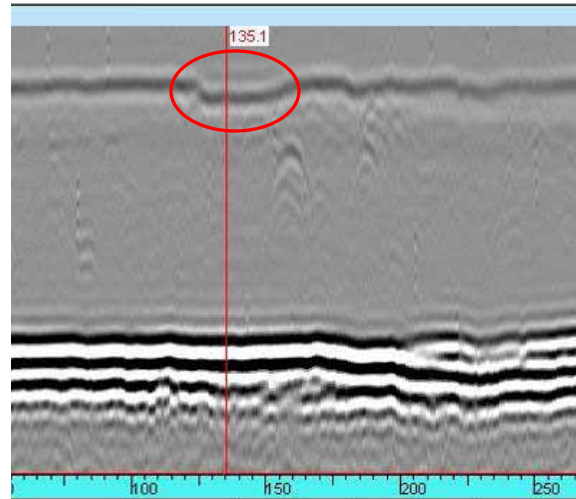
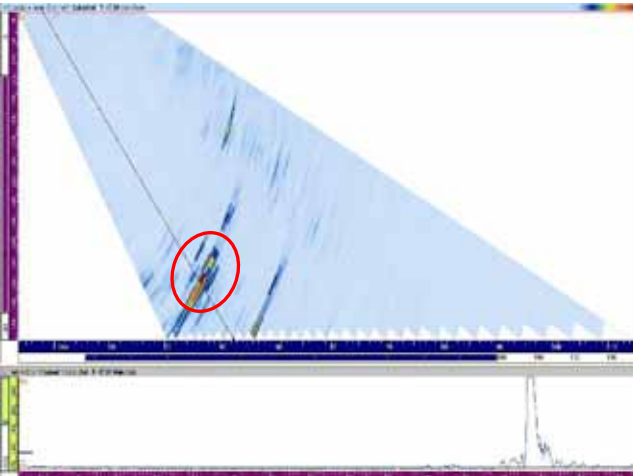


Weld 5; Circ Loc. = 179 mm

Non-zonal PA Techniques

US

DS

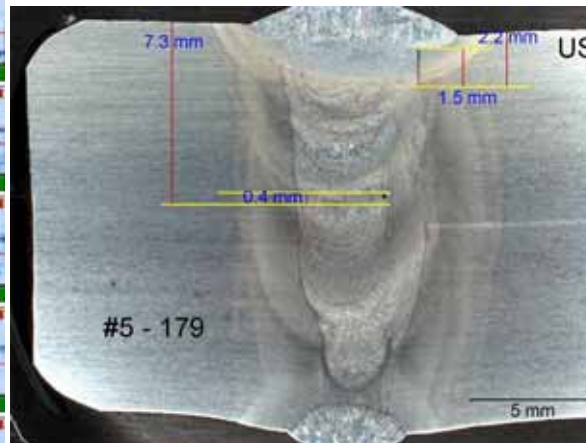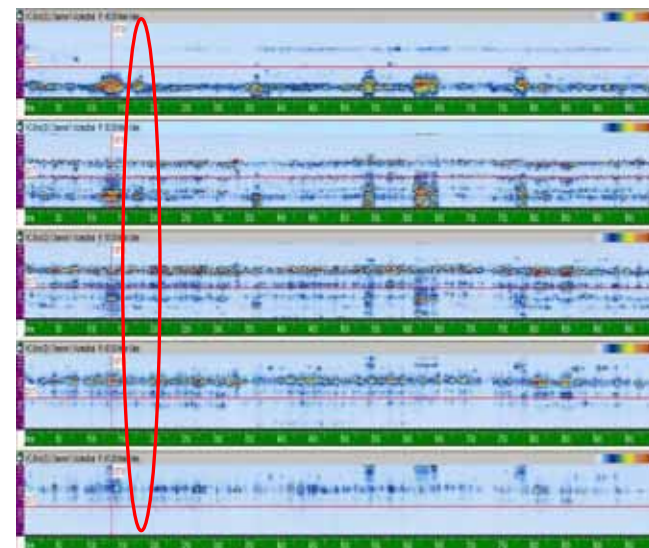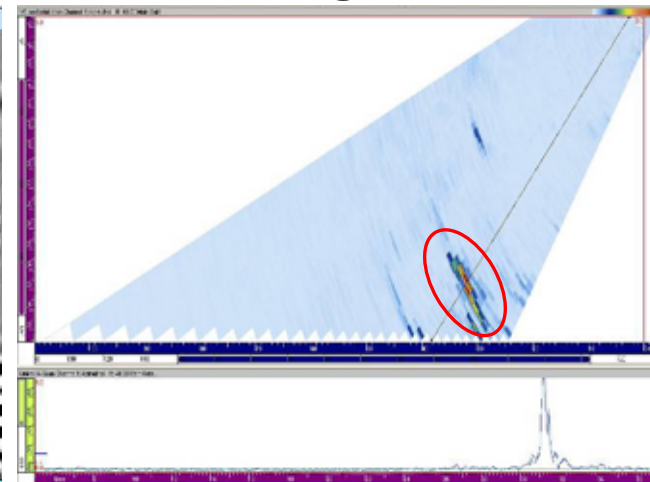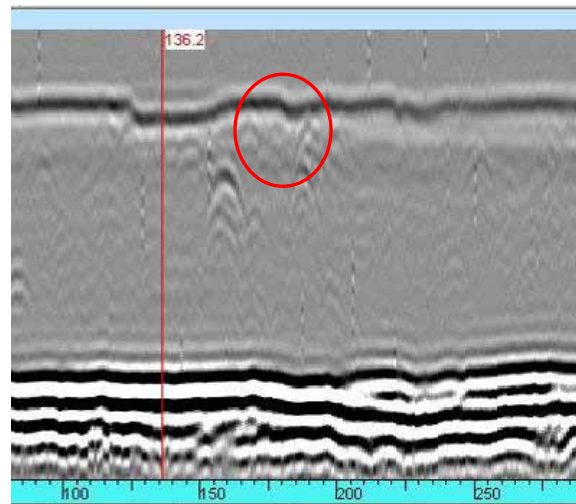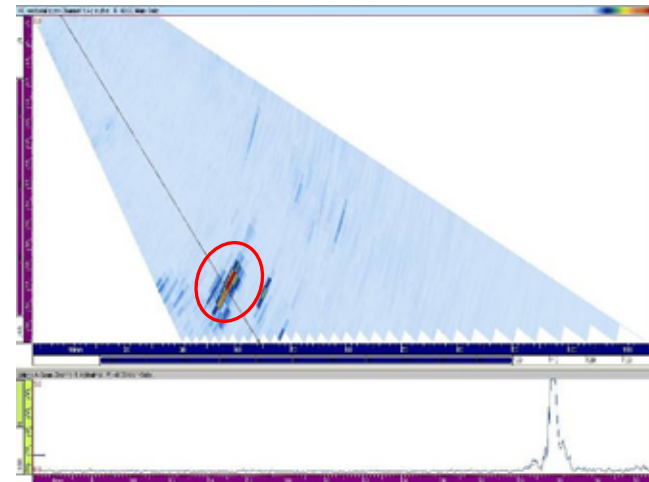


Weld 5; Circ Loc. = 337 mm

Non-zonal PA Techniques

US

DS






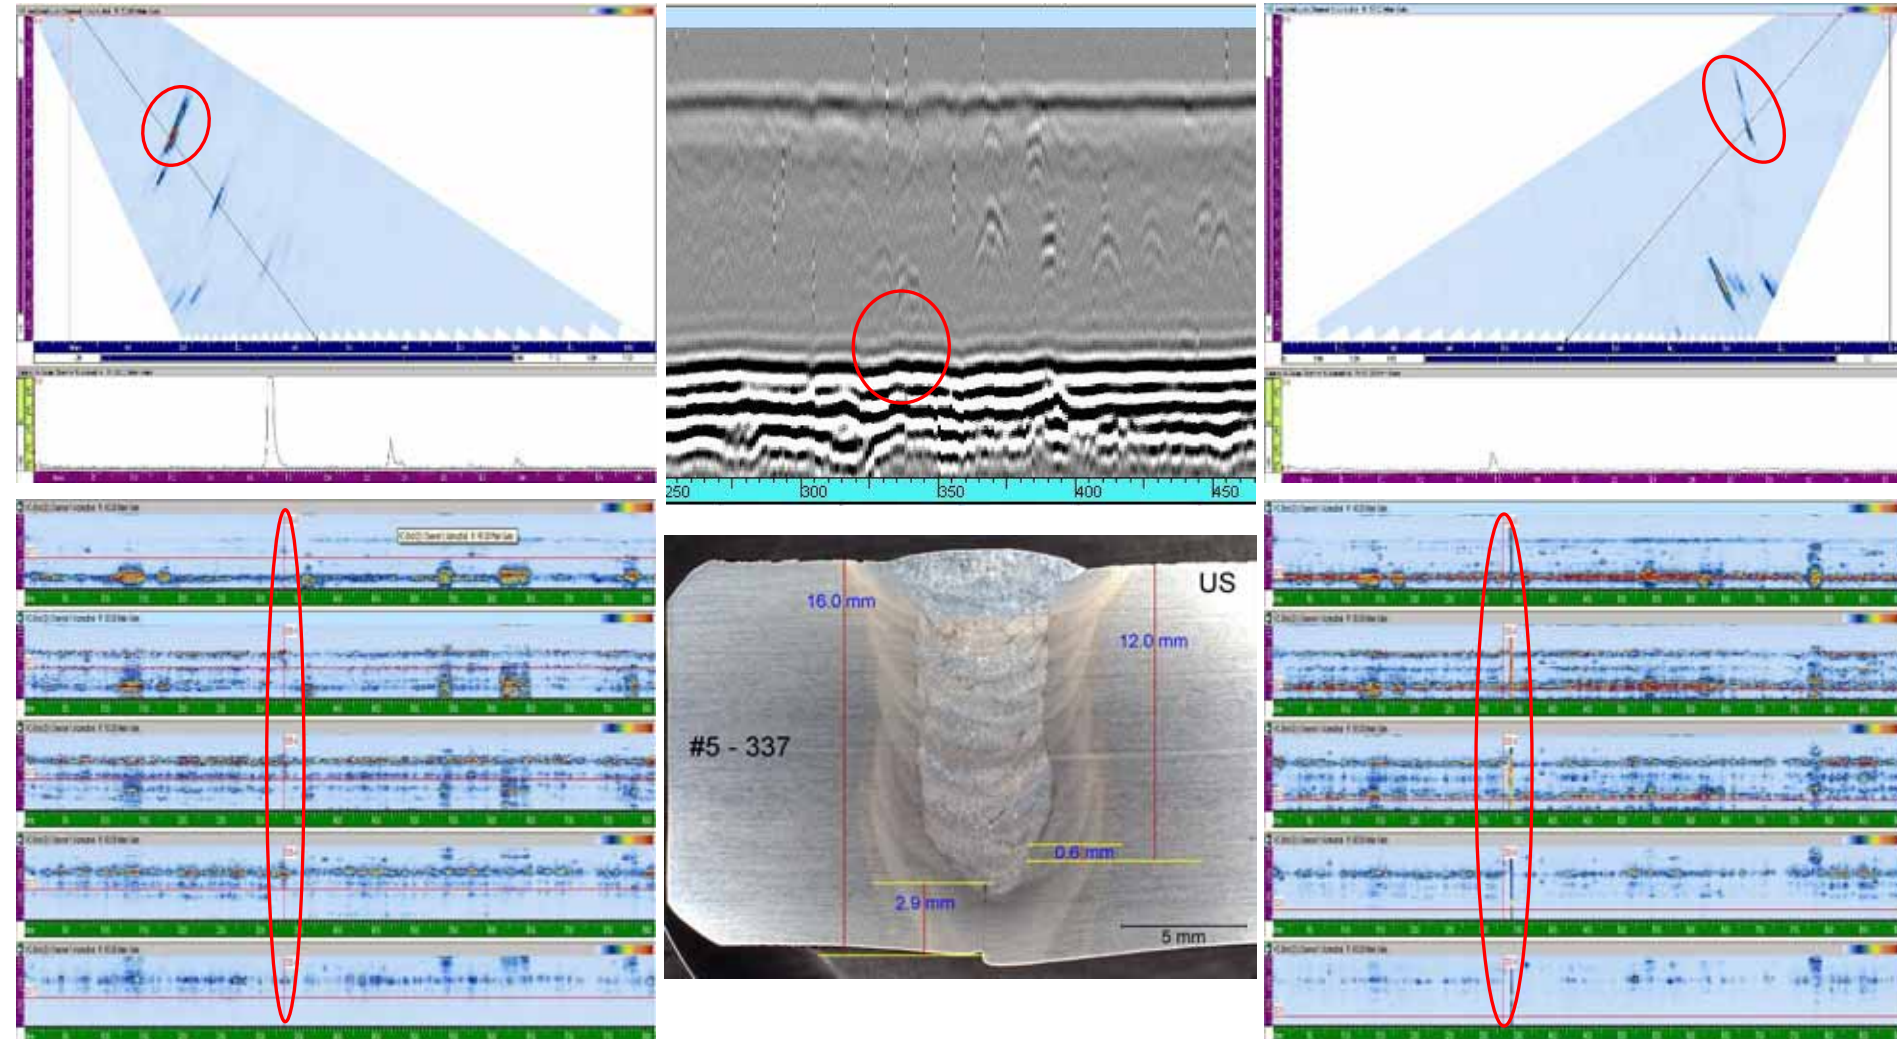


Weld 5; Circ Loc. = 539 mm

Non-zonal PA Techniques

US

DS

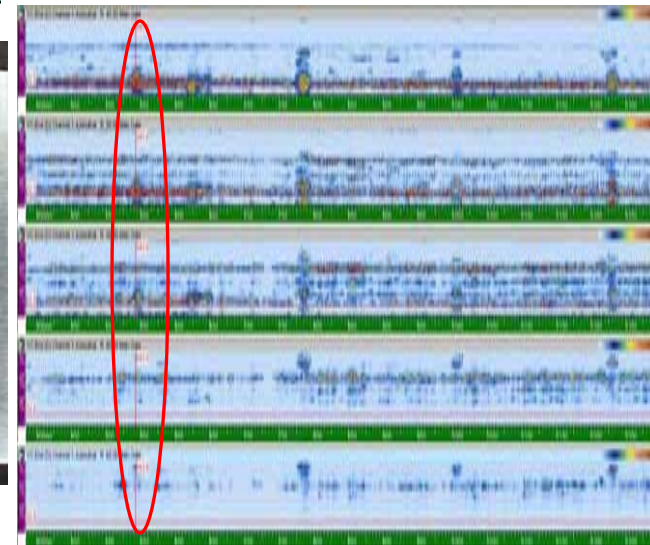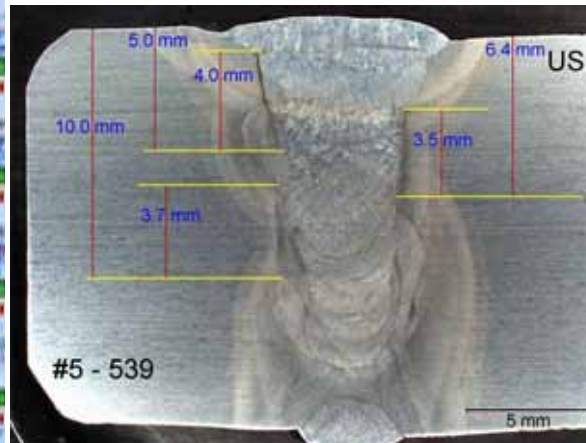
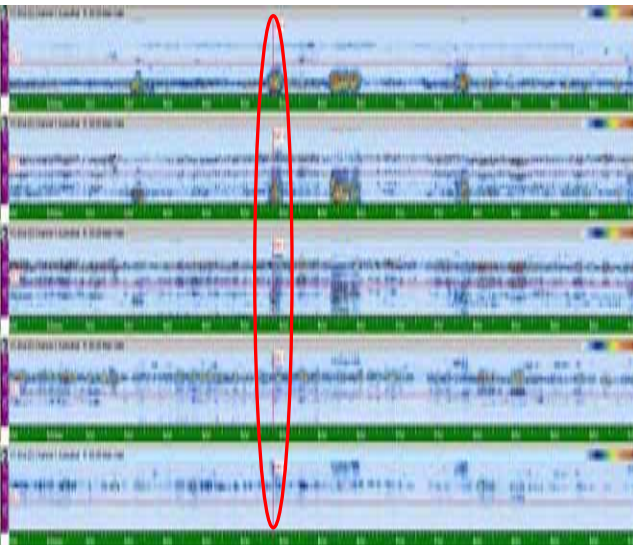
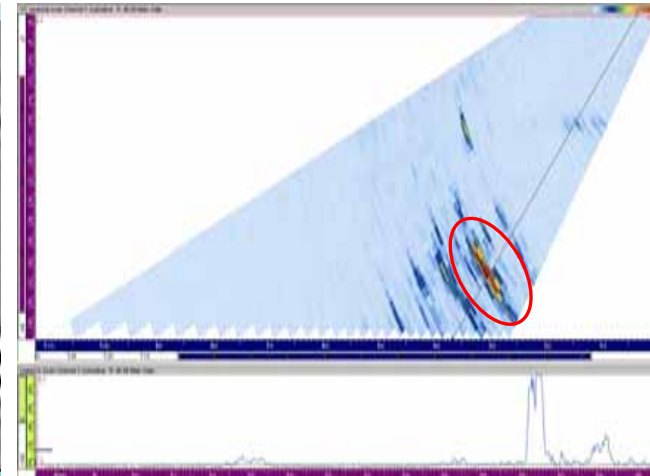
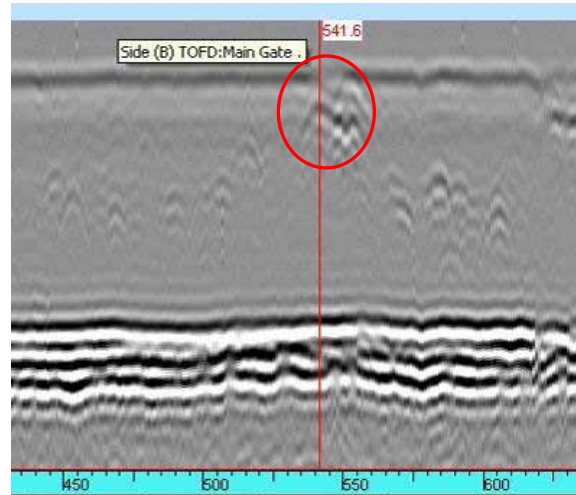
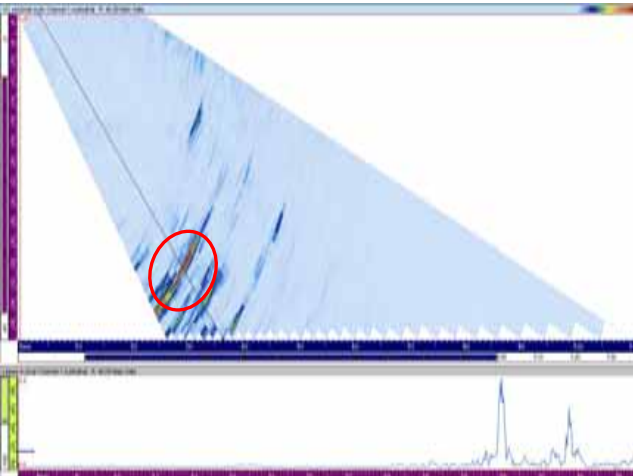


Weld 5; Circ Loc. = 629 mm

Non-zonal PA Techniques

US

DS


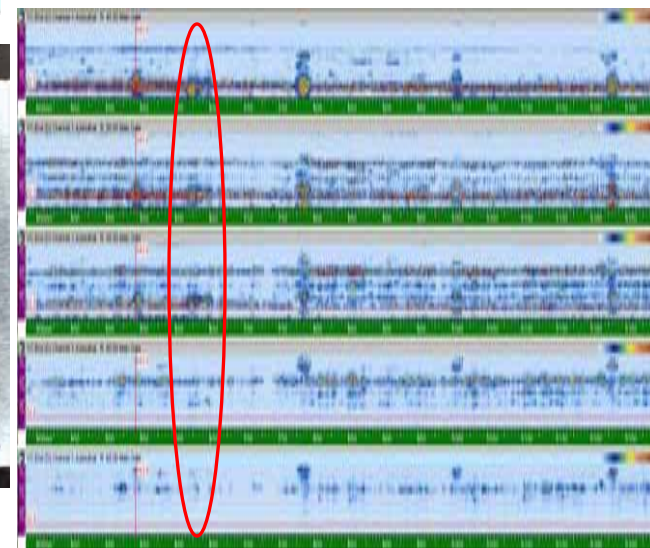
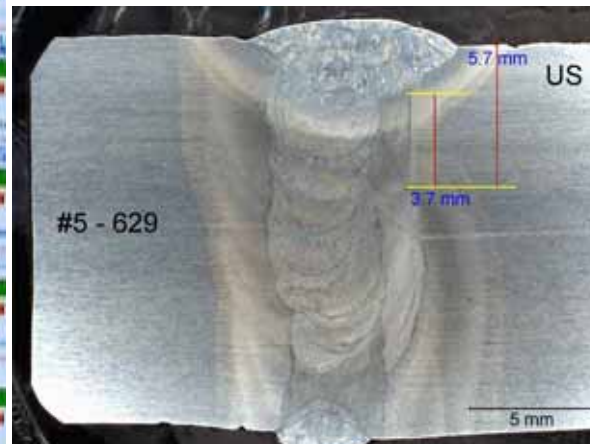
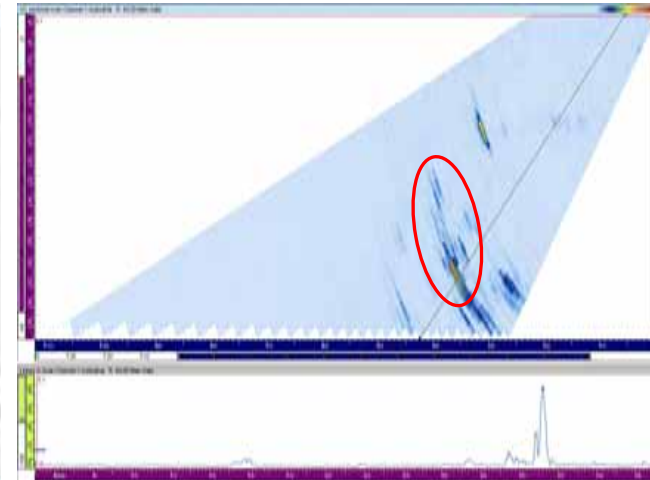
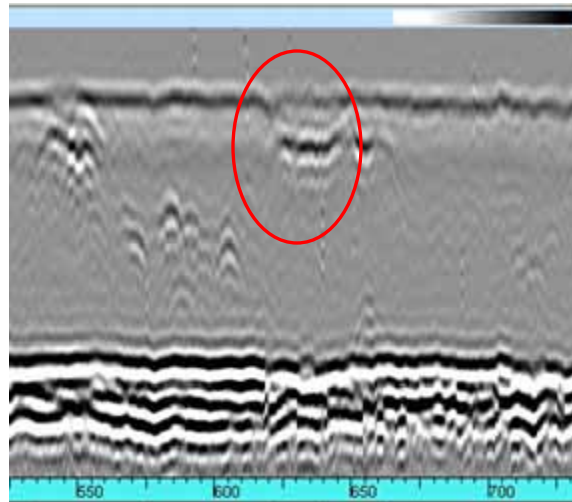
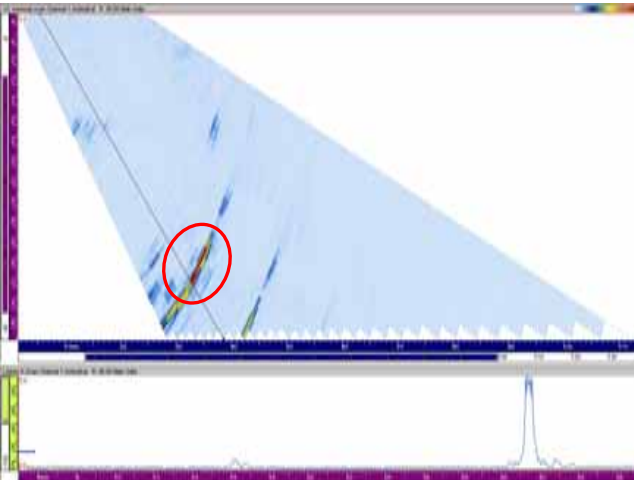


Weld 5; Circ Loc. = 786 mm

Non-zonal PA Techniques

US

DS

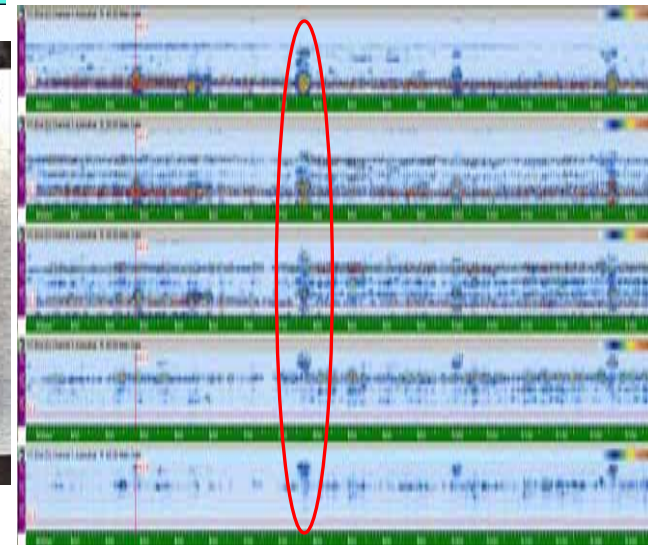
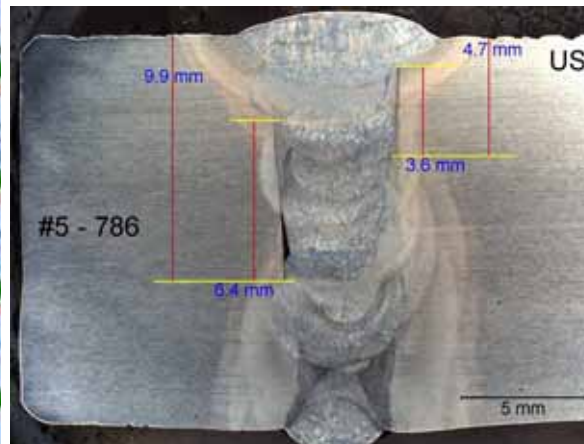
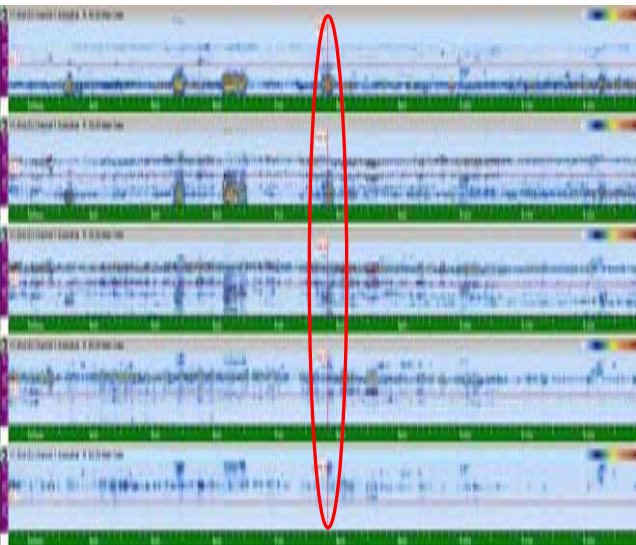
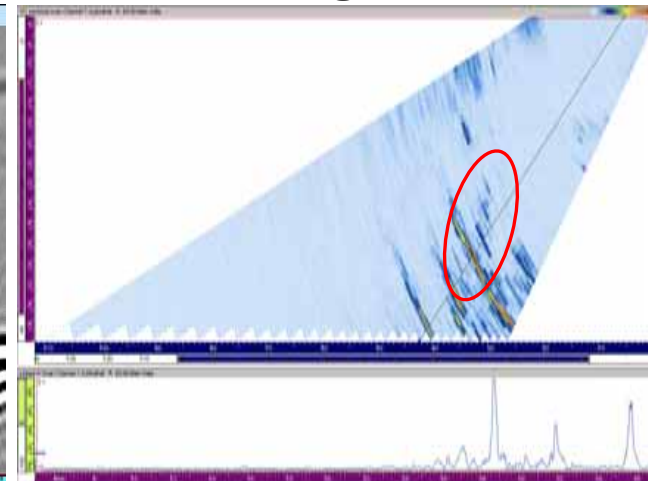
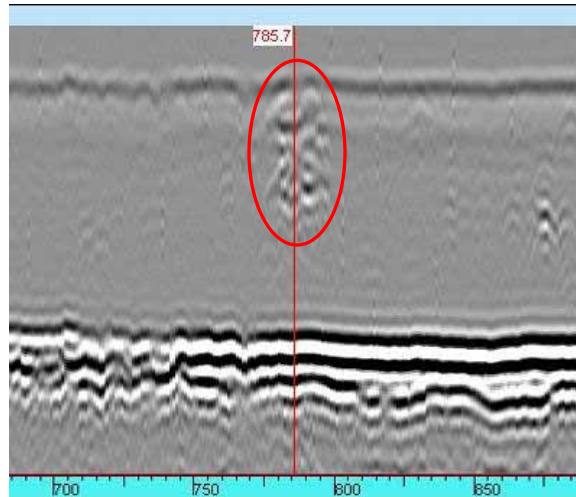
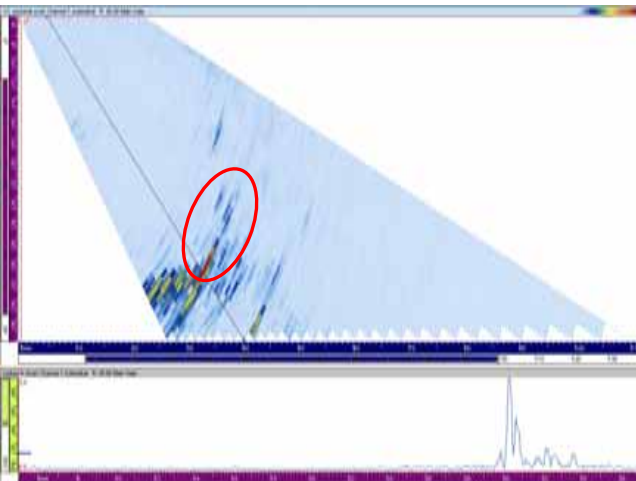


Weld 5; Circ Loc. = 970 mm

Non-zonal PA Techniques

US

DS

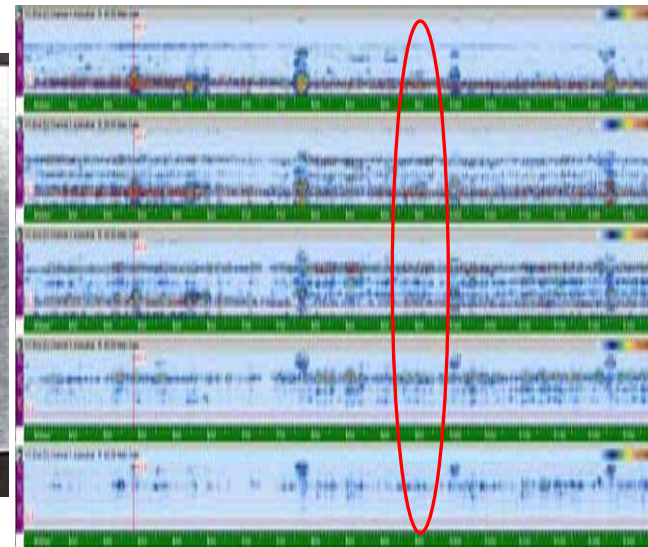
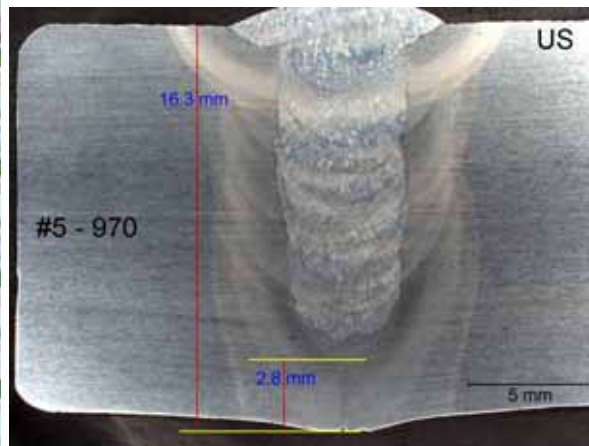
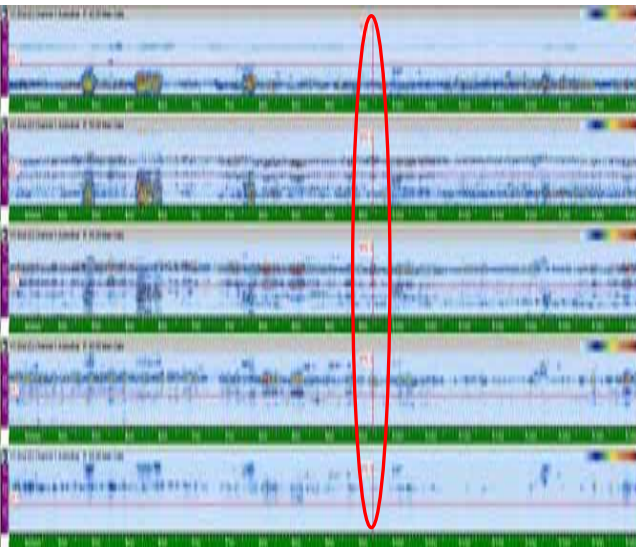
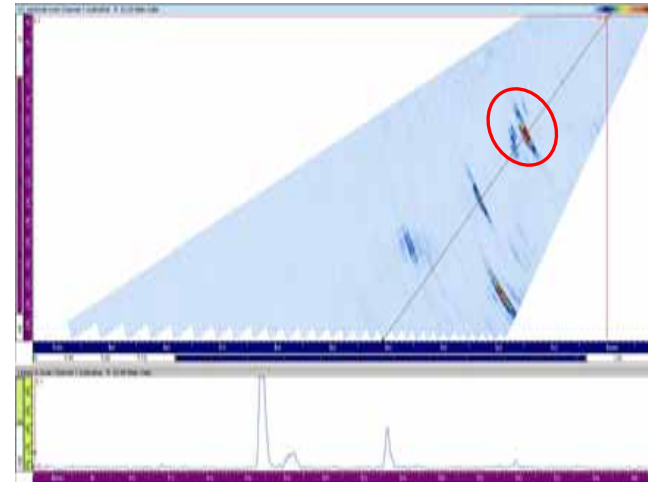
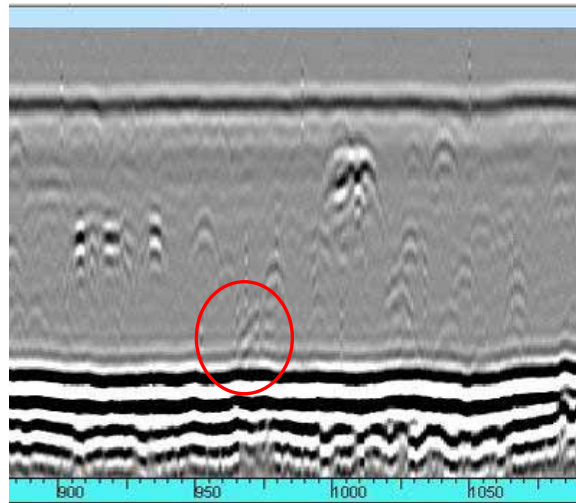
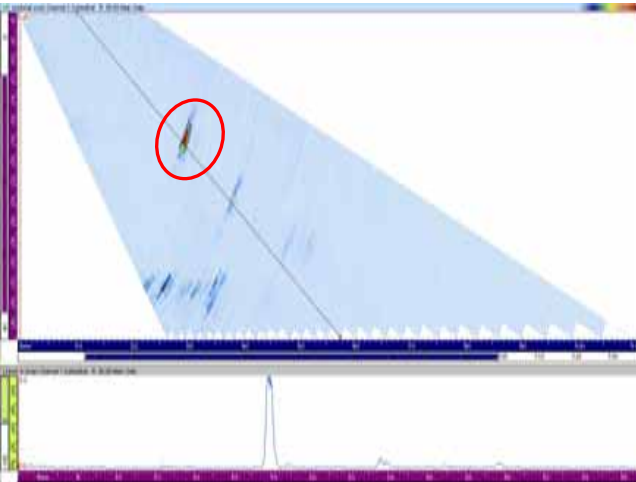


Weld 5; Circ Loc. = 1000 mm

Non-zonal PA Techniques

US

DS

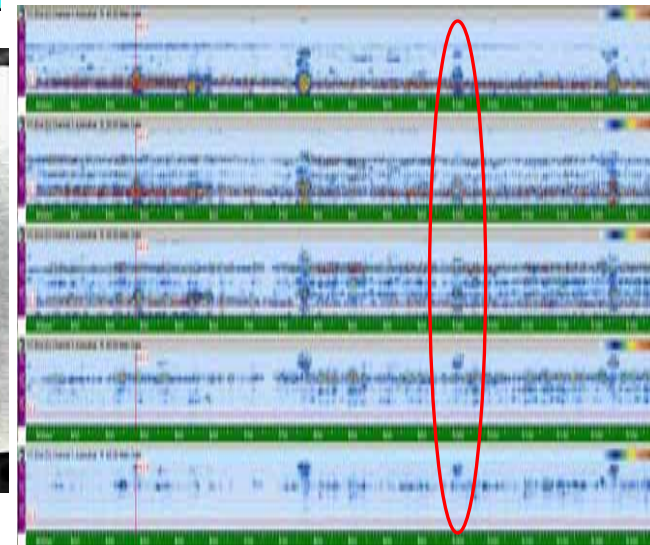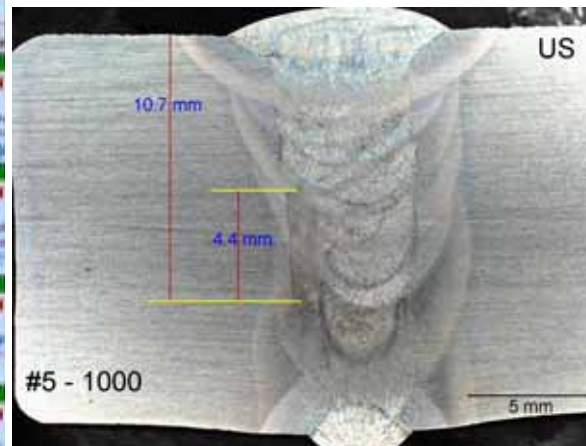
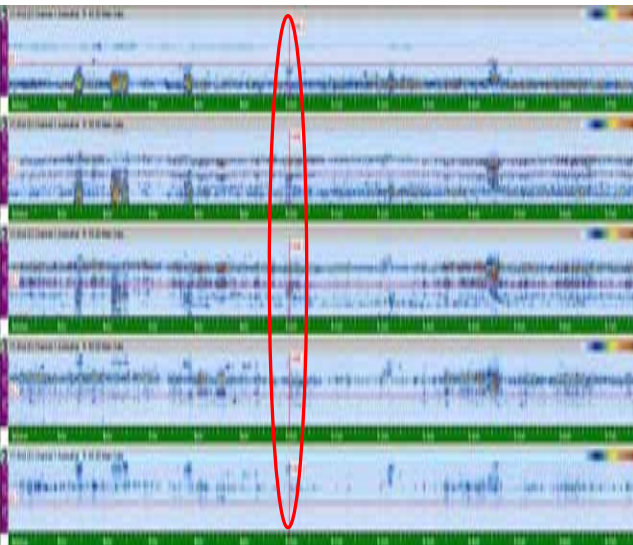
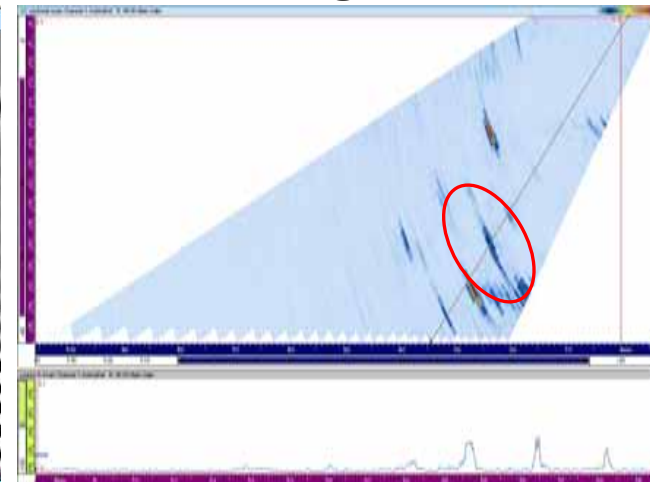
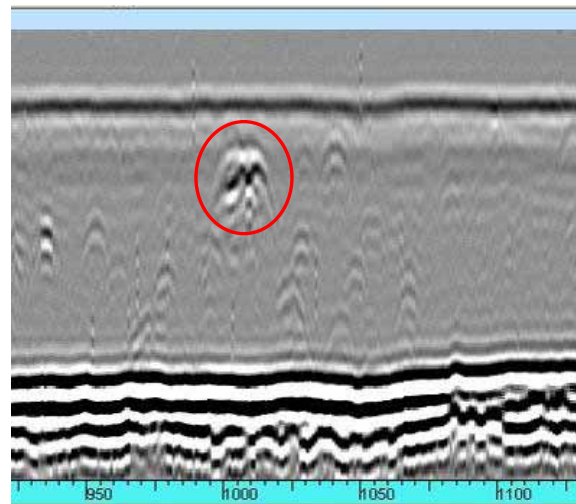
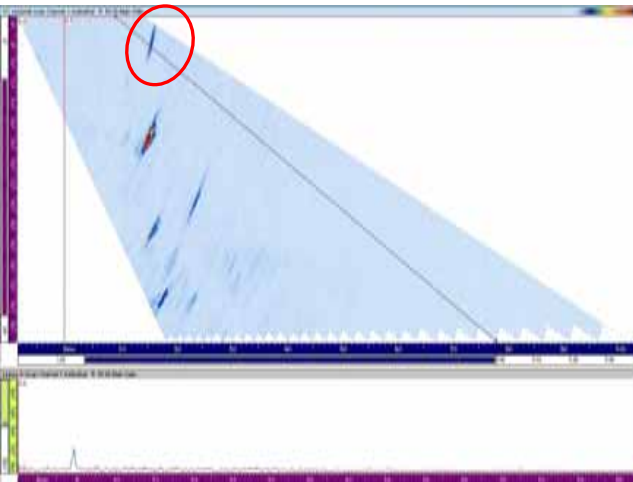


Weld 5; Circ Loc. = 1212 mm

Non-zonal PA Techniques

US

DS

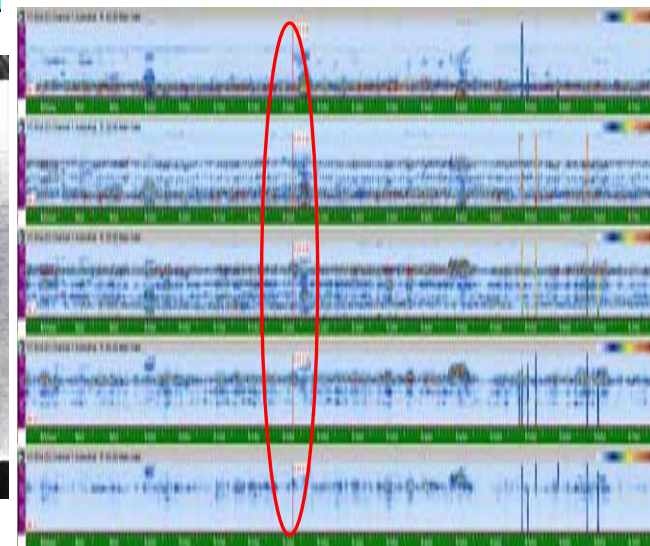
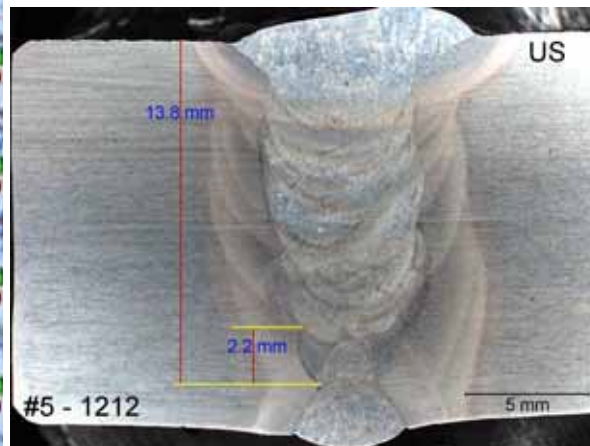
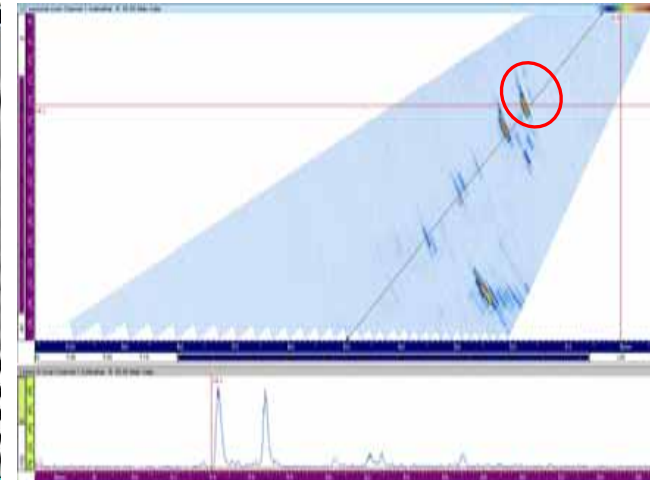
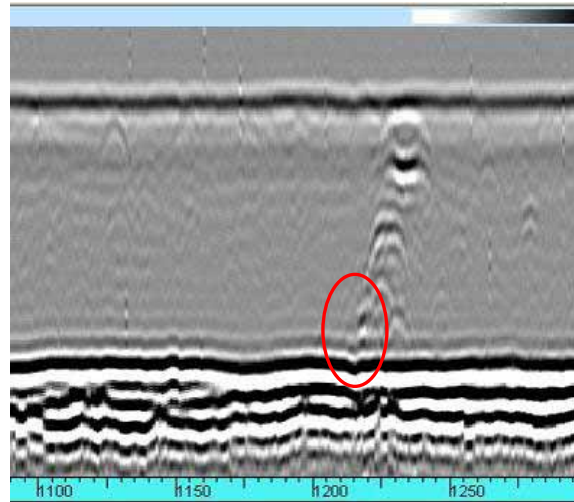
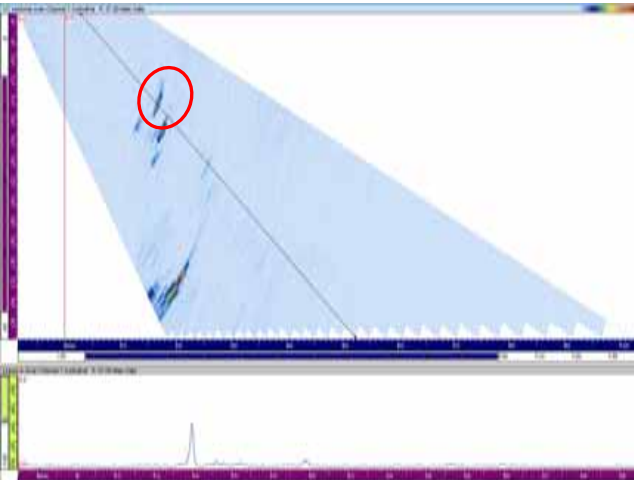


Weld 5; Circ Loc. = 1230 mm

Non-zonal PA Techniques

US

DS


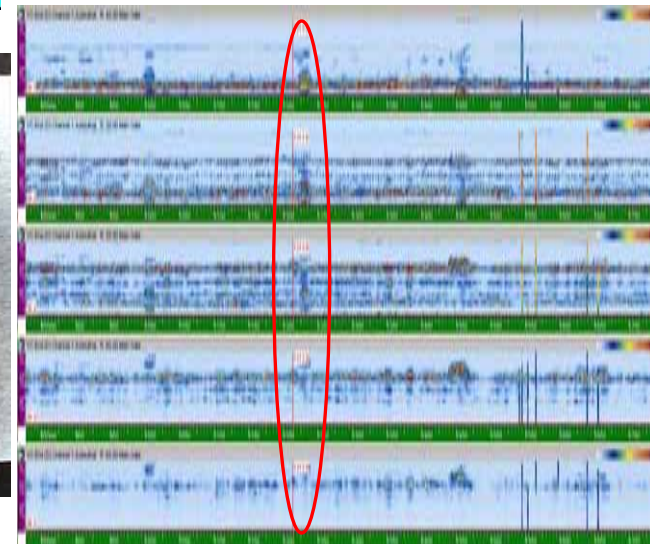
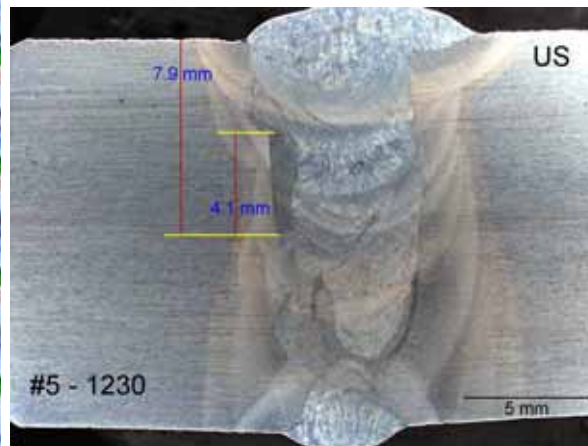
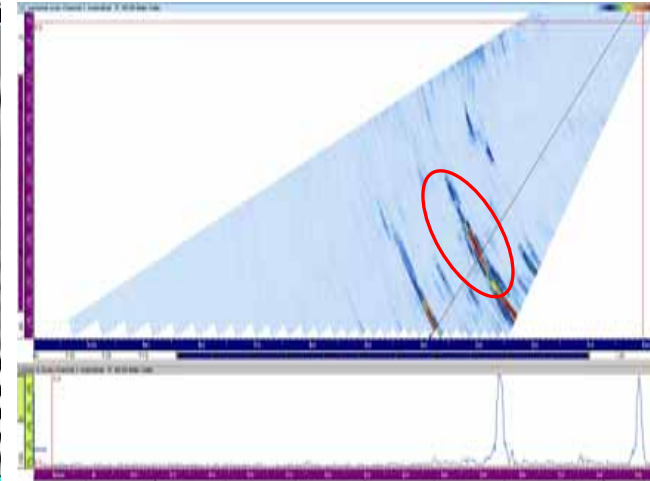
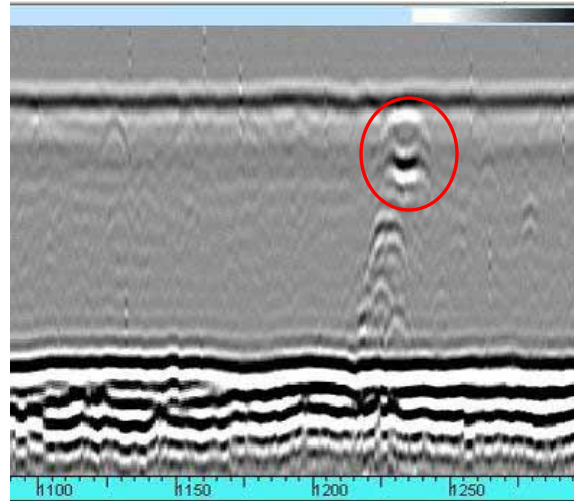
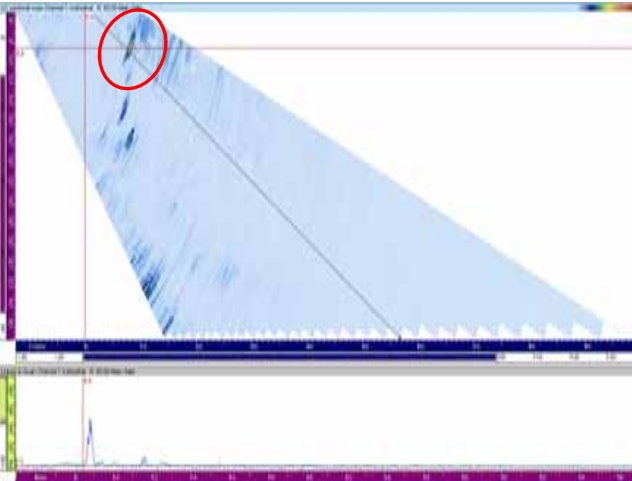


Weld 5; Circ Loc. = 1449 mm

Non-zonal PA Techniques

US

DS

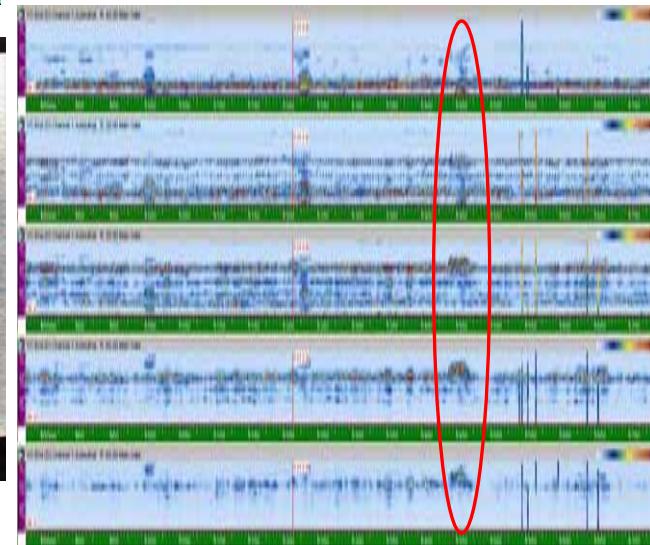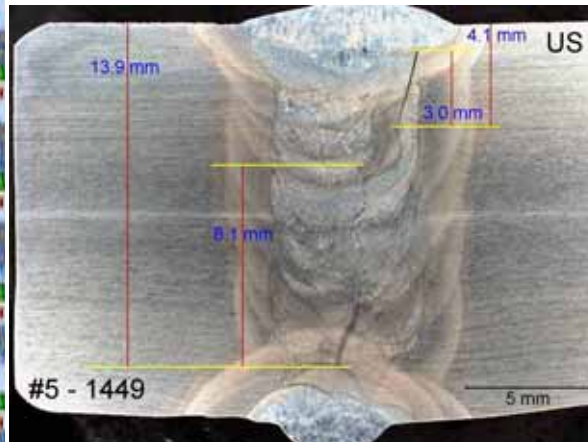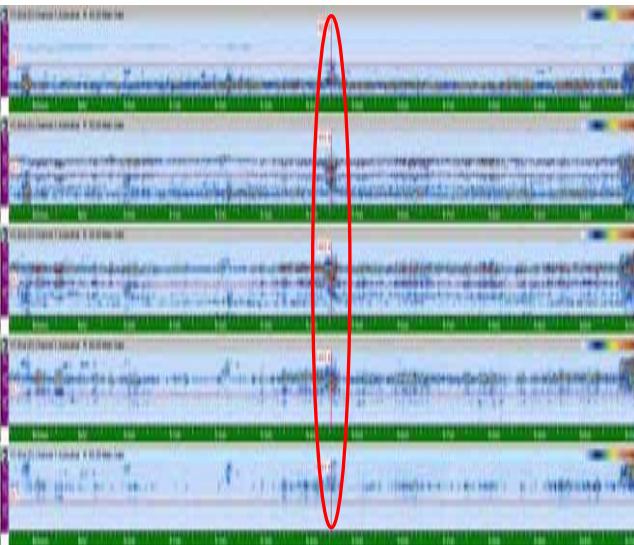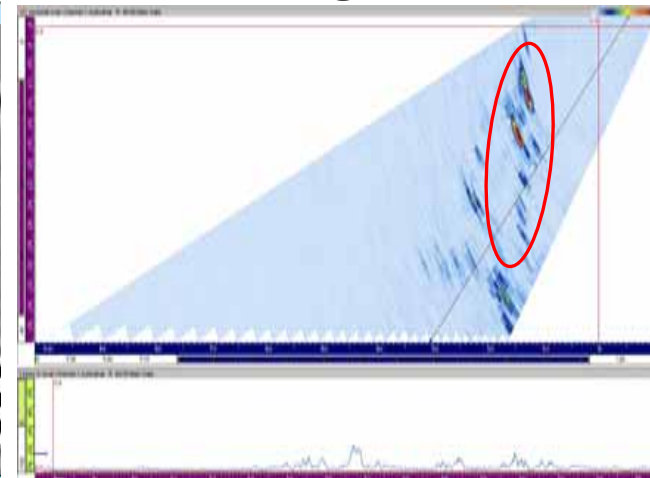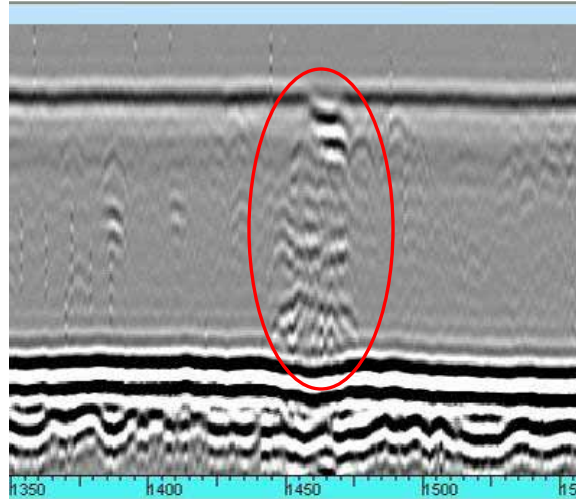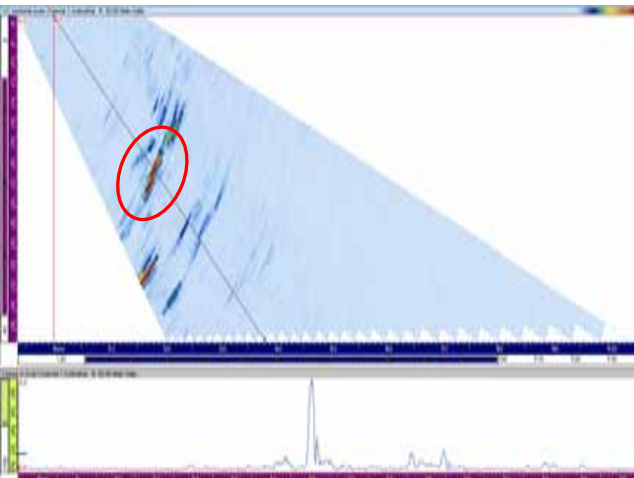

Weld 5; Circ Loc. = 2119 mm

Non-zonal PA Techniques

US

DS

