
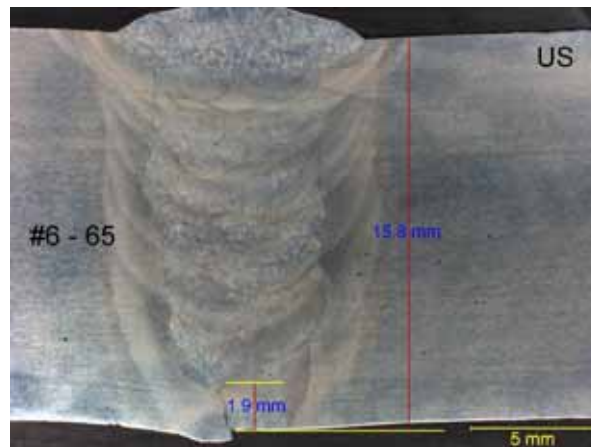


Weld 6; Circ Loc. = 65 mm

Zonal PA Techniques

US

DS


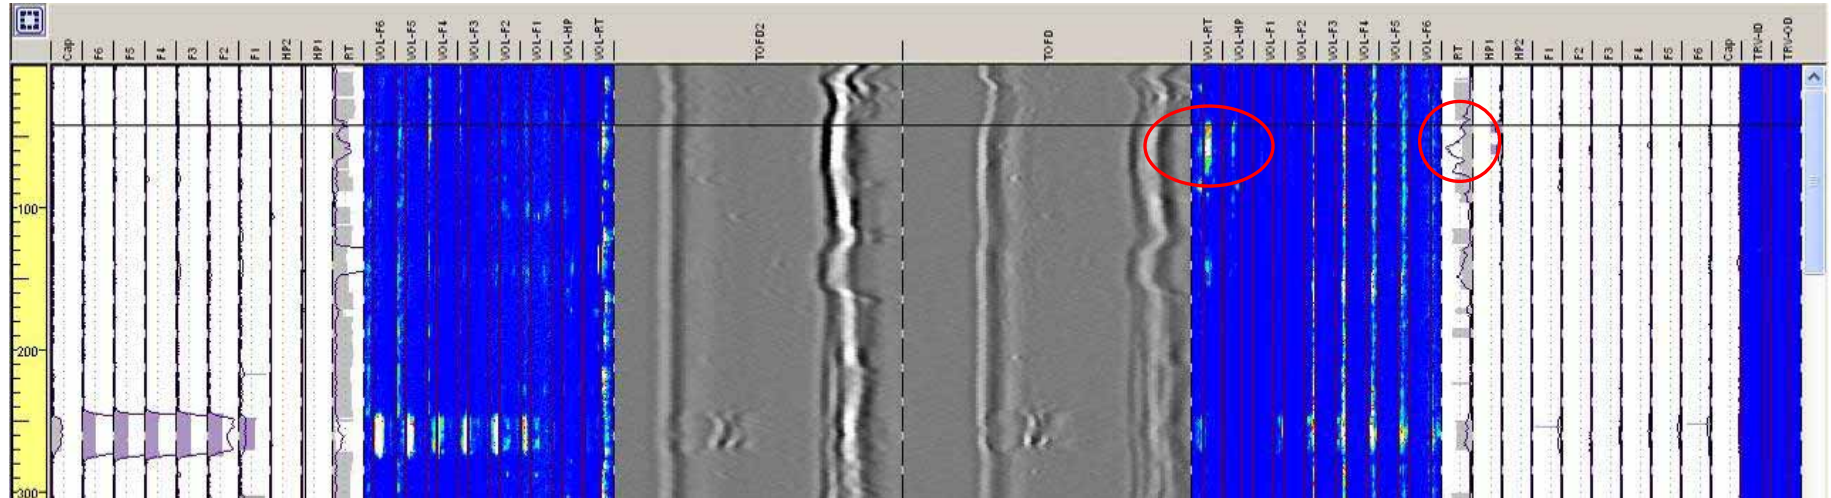


Weld 6; Circ Loc. = 101 mm

Zonal PA Techniques

US

DS

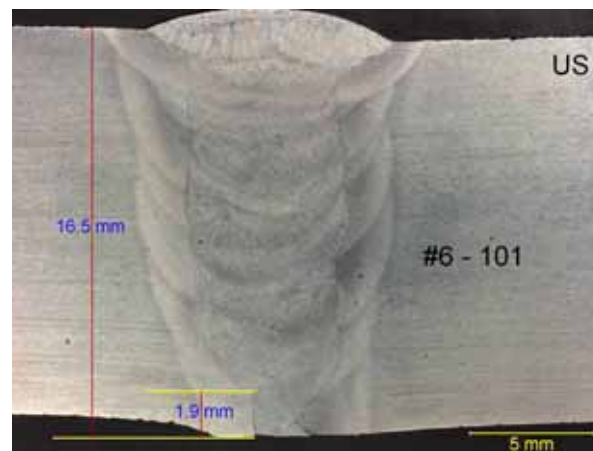
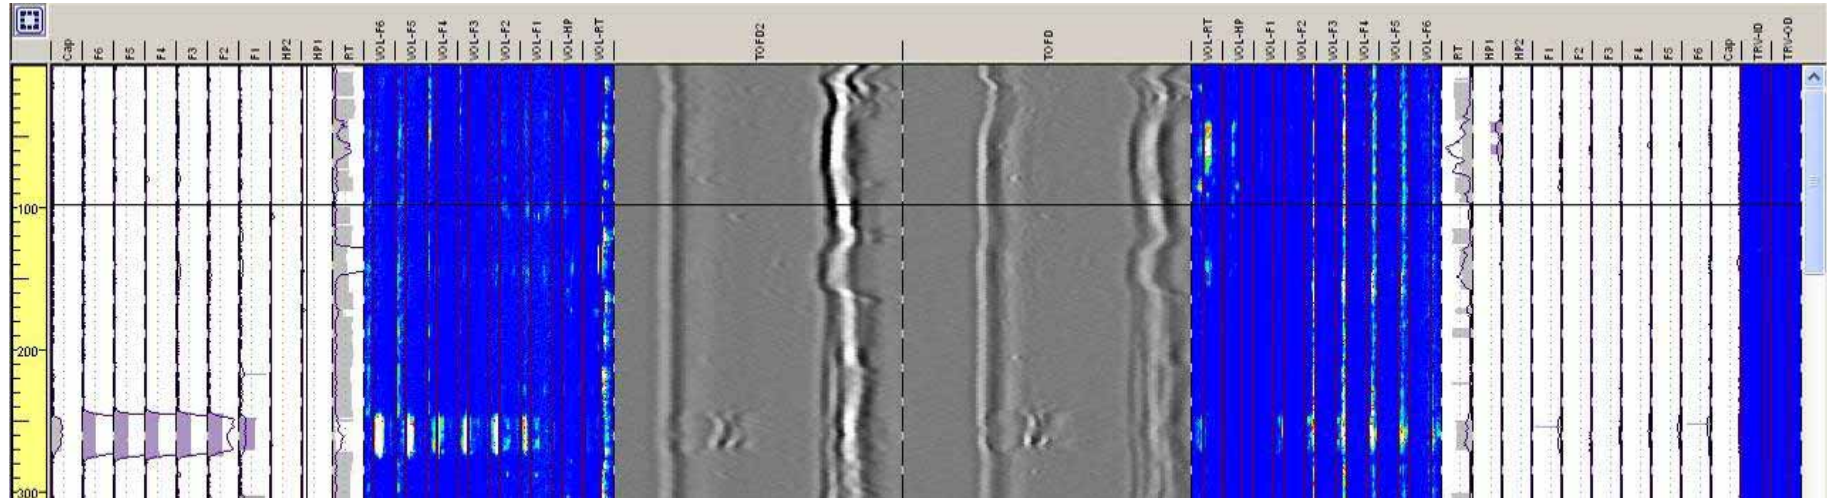


Weld 6; Circ Loc. = 139 mm

Zonal PA Techniques

US

DS

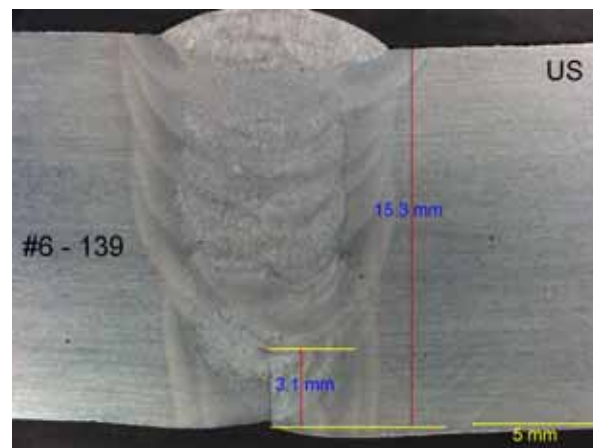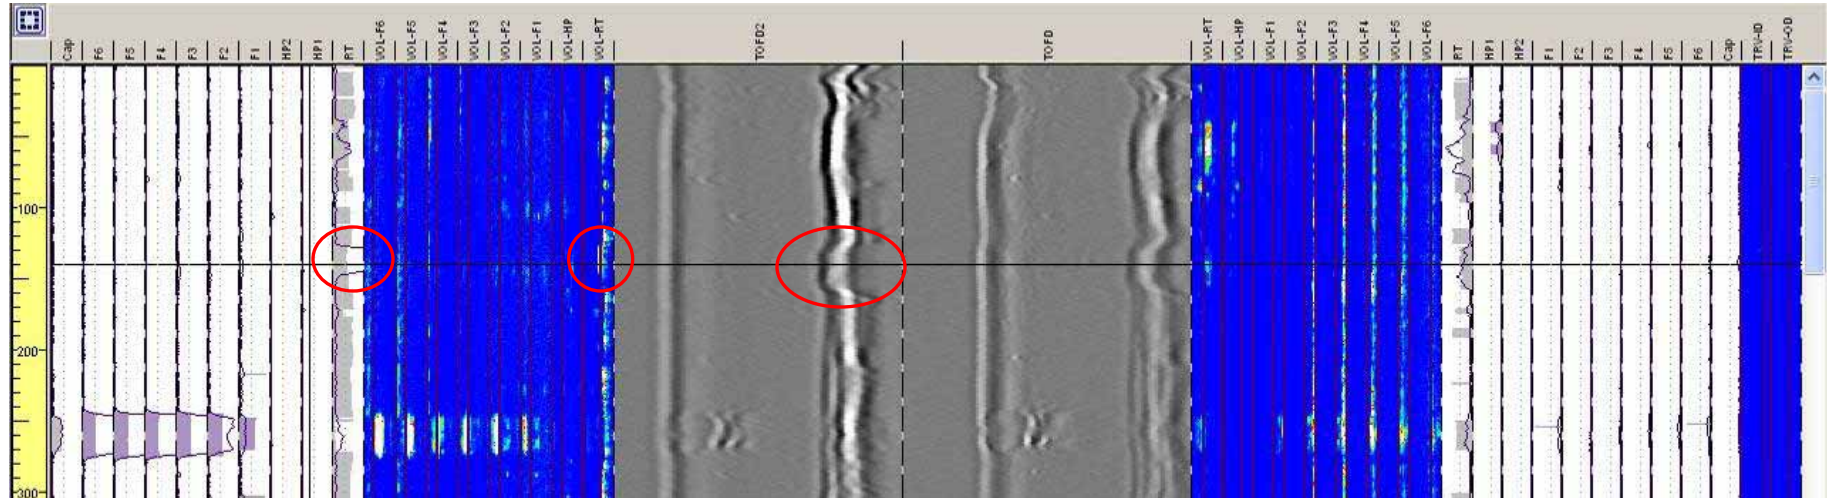


Weld 6; Circ Loc. = 260 mm

Zonal PA Techniques

US

DS


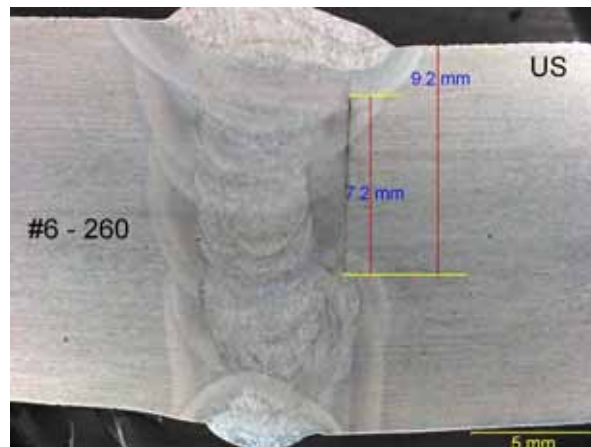


Weld 6; Circ Loc. = 483 mm

Zonal PA Techniques

US

DS

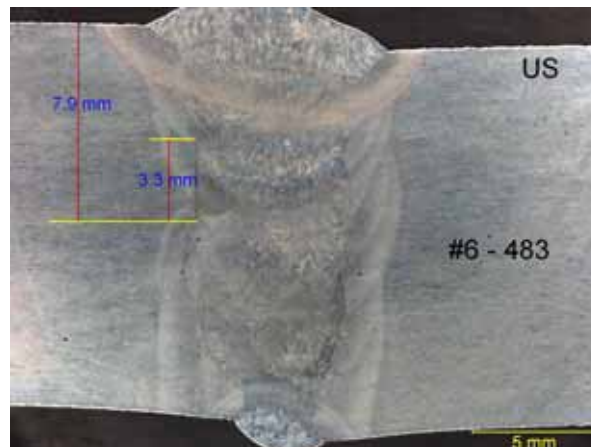
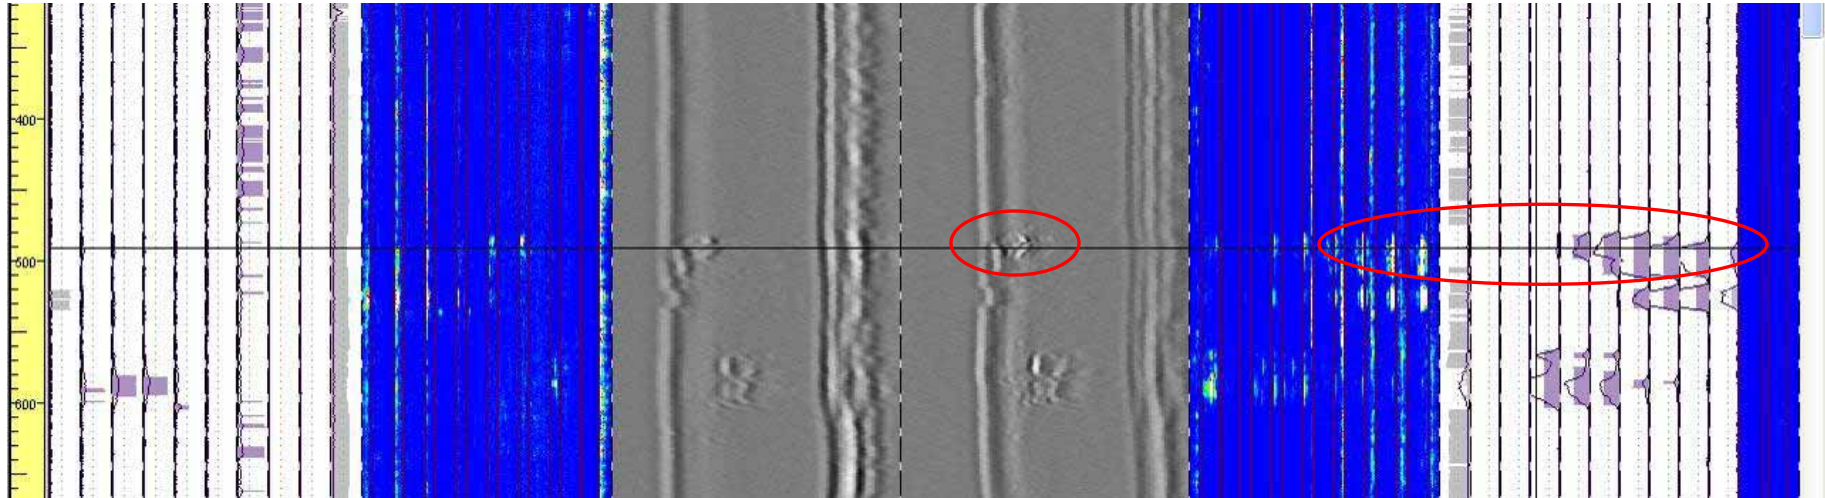


Weld 6; Circ Loc. = 491 mm

Zonal PA Techniques

US

DS

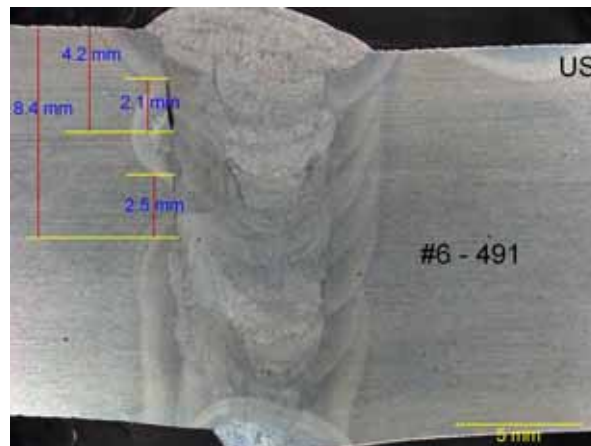
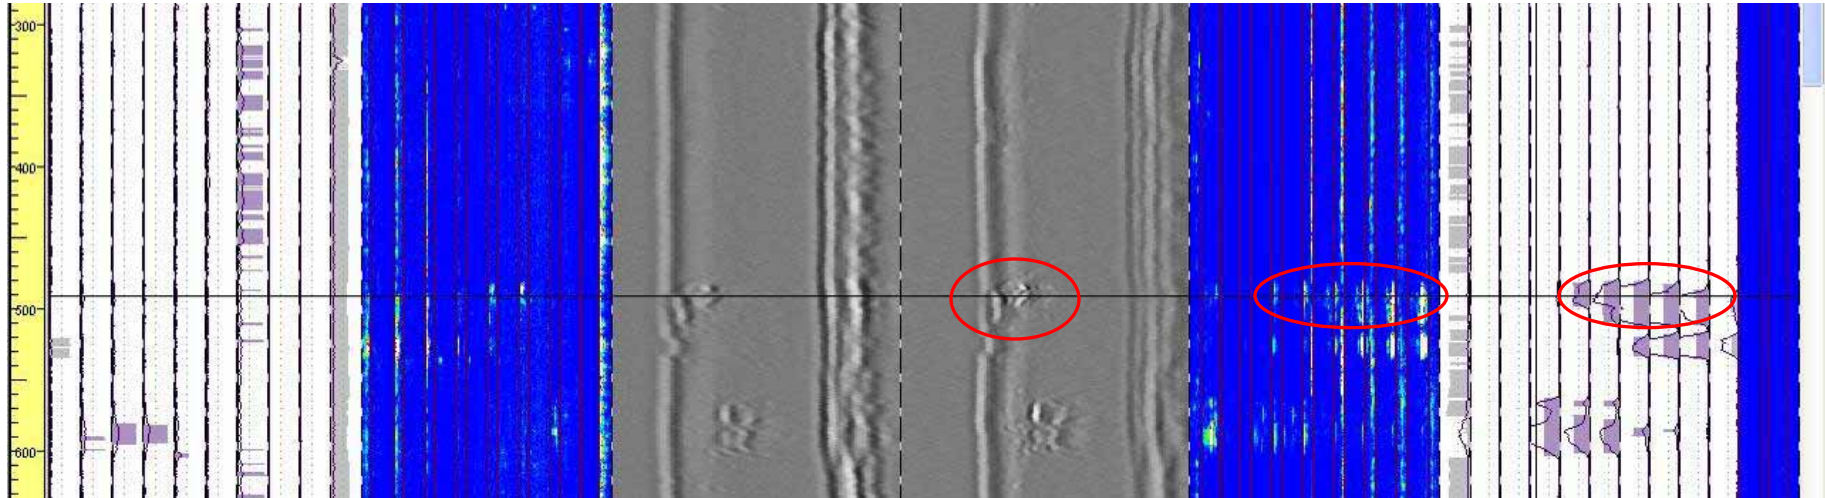


Weld 6; Circ Loc. = 522 mm

Zonal PA Techniques

US

DS

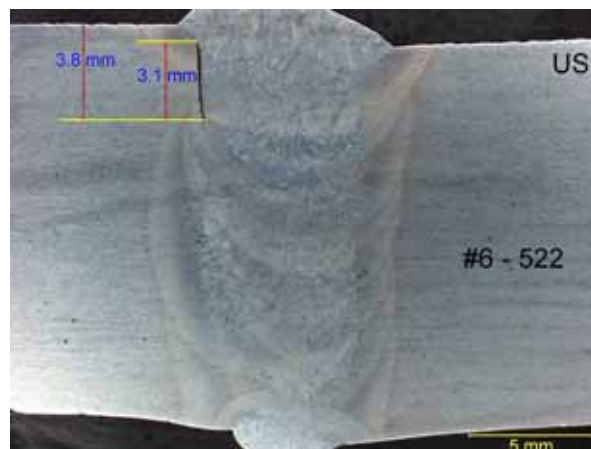
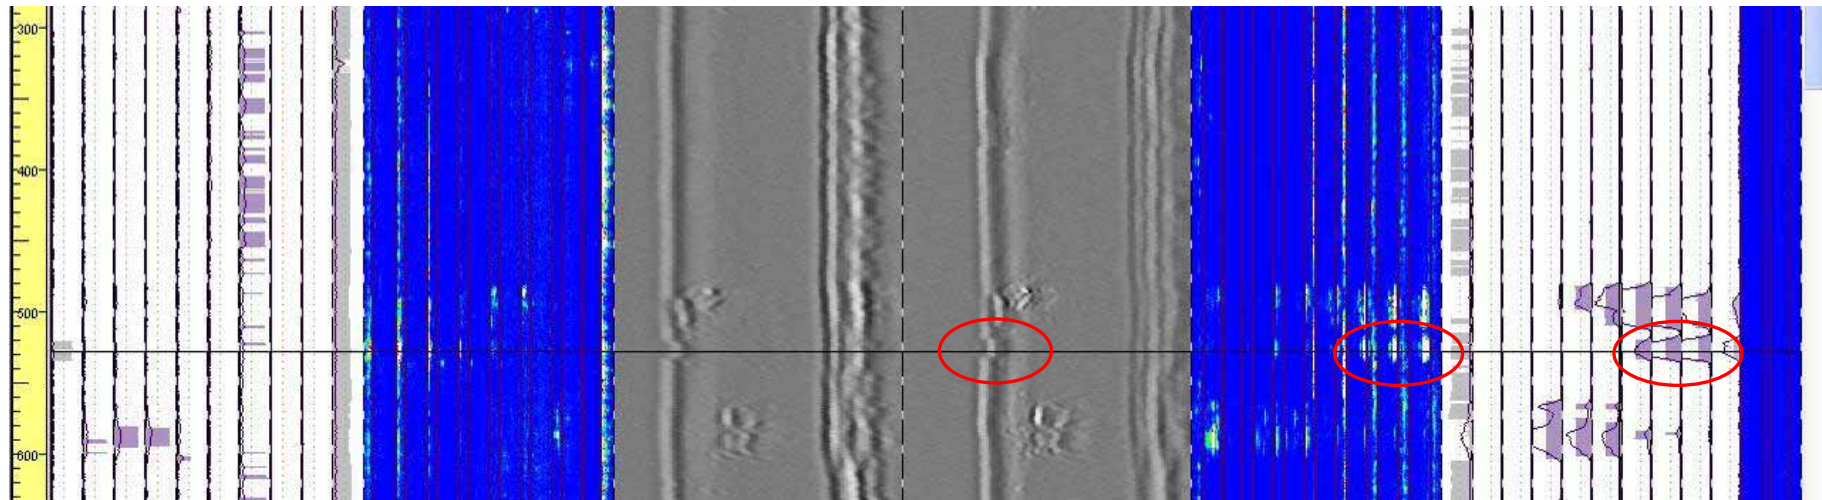


Weld 6; Circ Loc. = 1013 mm

Zonal PA Techniques

US

DS

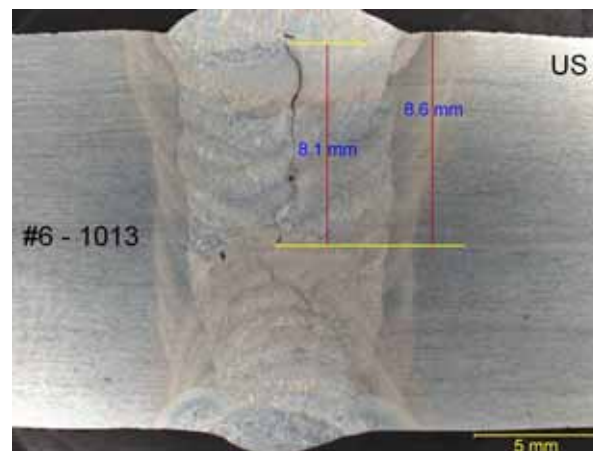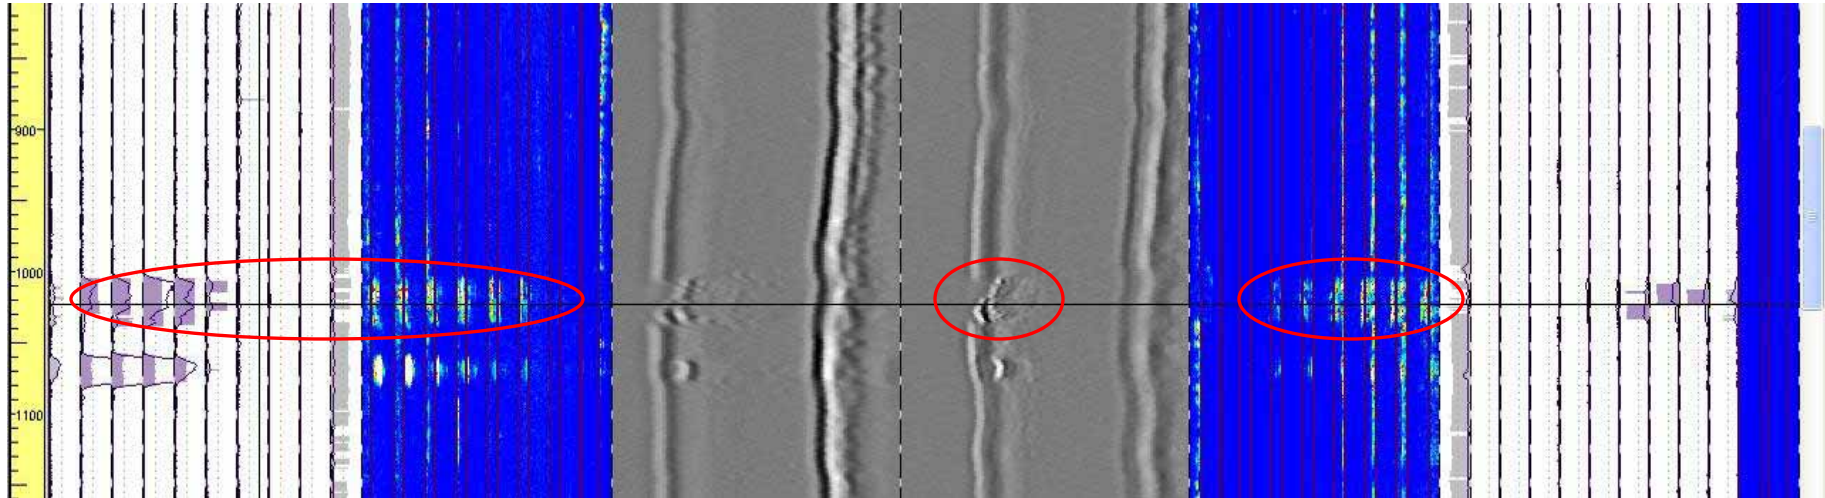


Weld 6; Circ Loc. = 1066 mm

Zonal PA Techniques

US

DS

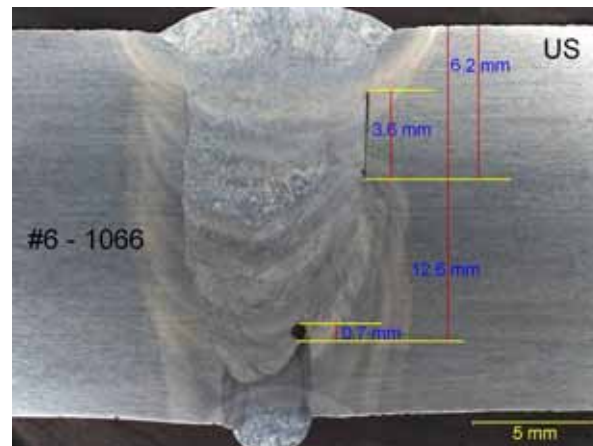


Weld 6; Circ Loc. = 1251 mm

Zonal PA Techniques

US

DS

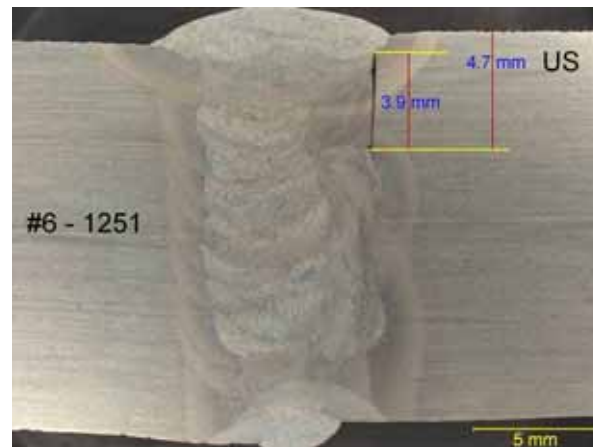


Weld 6; Circ Loc. = 1272 mm

Zonal PA Techniques

US

DS

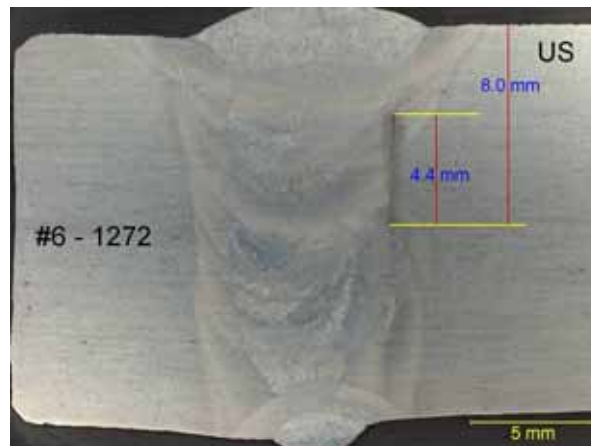


Weld 6; Circ Loc. = 1376 mm

Zonal PA Techniques

US

DS


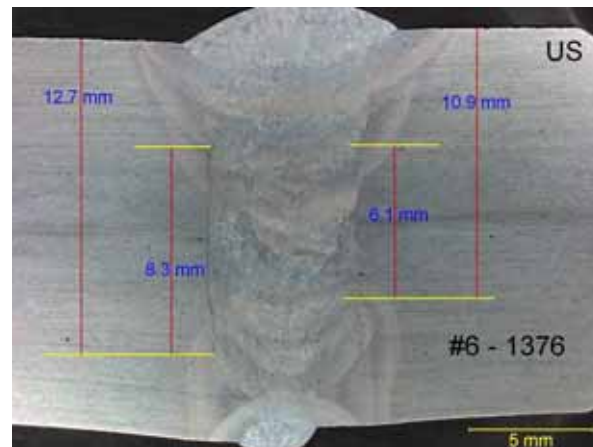


Weld 6; Circ Loc. = 1568 mm

Zonal PA Techniques

US

DS

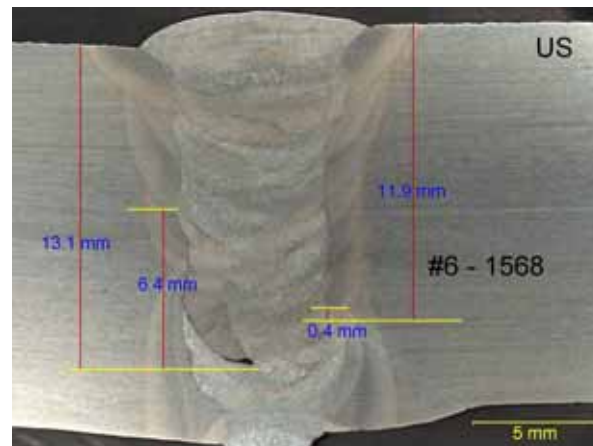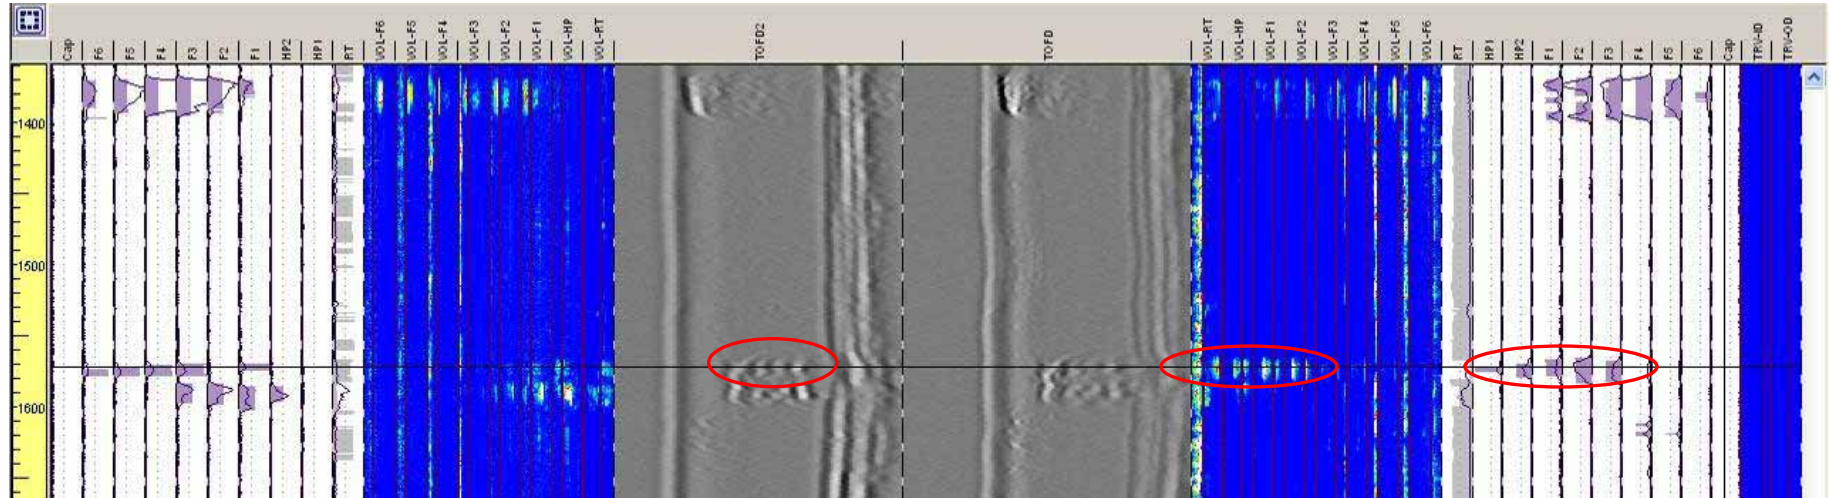


Weld 6; Circ Loc. = 1583 mm

Zonal PA Techniques

US

DS

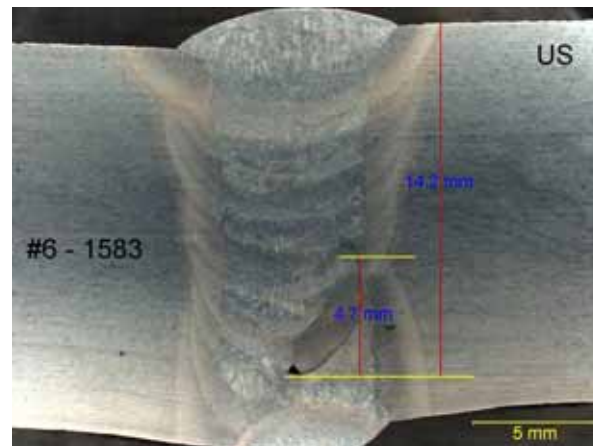

Weld 6; Circ Loc. = 2062 mm

Zonal PA Techniques

US

DS

